

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--|---------------------|------|------------------------|---------|--|
| 1- 1 | 303A 8510900 303A 7824310 | Top cover assembly | 1 | ○ | | |
| 1- 2 | 11B 7824470 | Top cover | 1 | × | | |
| 1- 3 | 6B 7824490 | Diffuser | 1 | ○ | | |
| 1- 4 | 6B 7824480 | Window glass | 1 | ○ | | |
| 1- 5 | 16B 7824640 | Shutter release | 1 | ○ | | |
| 1- 6 | 6B 7824500 | LCD window | 1 | × | | |
| 1- 7 | 55B 7825050 | Washer | 1 | ○ | | |
| 1- 8 | 55B 7825040 | Clip ring | 1 | ○ | | |
| 1- 9 | 187B 7824430 | Adhesive tape | 2 | ○ | | |
| 1- 10 | 85B 7824420 | Guide | 1 | ○ | | |
| 1- 11 | 32B 7824440 | Shaft | 1 | ○ | | |
| 1- 13 | 53B 7824550 | Screw | 1 | ○ | | |
| 1- 14 | 54B 7824560 | Nut | 1 | ○ | | |
| 1- 15 | 16B 7825190 | Pop-up lever | 1 | ○ | | |
| 1- 16 | 50B 7825200 | Spring | 1 | ○ | | |
| 1- 17 | 53B 7825210 | Screw | 1 | ○ | | |
| 1- 18 | 31A 7824330 | Hinge assembly | 1 | ○ | | |
| 1- 19 | 31B 7828180 | Hinge | 1 | × | | |
| 1- 20 | 32B 7828170 | Hinge shaft | 1 | × | | |
| 1- 21 | 187B 7058510 | Adhesive tape | 1 | ○ | | |
| 1- 22 | 110M 170252M | Screw | 1 | ○ | | |
| 1- 23 | 23B 7824630 | Eyepiece | 1 | × | | |
| 1- 24 | 32B 7828120 | Shaft | 1 | ○ | | |
| 1- 25 | 330A 7821940 | Flash head assembly | 1 | ○ | | |
| 1- 26 | 11B 3288384 | Shoe cover | 1 | ○ | GW690-3 | |
| 1- 27 | 701 114M 170053N | Screw | 3 | ○ | | |
| 1- 28 | 53B 7824620 | Screw | 1 | ○ | | |
| 1- 29 | 41B 2252410 | Accessory shoe | 1 | ○ | GW690-3 | |
| 1- 30 | 41A 7824450 | Shoe seat assembly | 1 | ○ | | |
| 1- 31 | 108B 7824750 | Lug (—) | 1 | ○ | | |
| 1- 32 | 109B 7824740 | Lug (+) | 1 | ○ | | |
| 1- 33 | 53B 93481 | Set screw | 1 | ○ | GW690-3 | |




PARTS LIST

FUJI GA645 Professional

Q922


Fig. 1

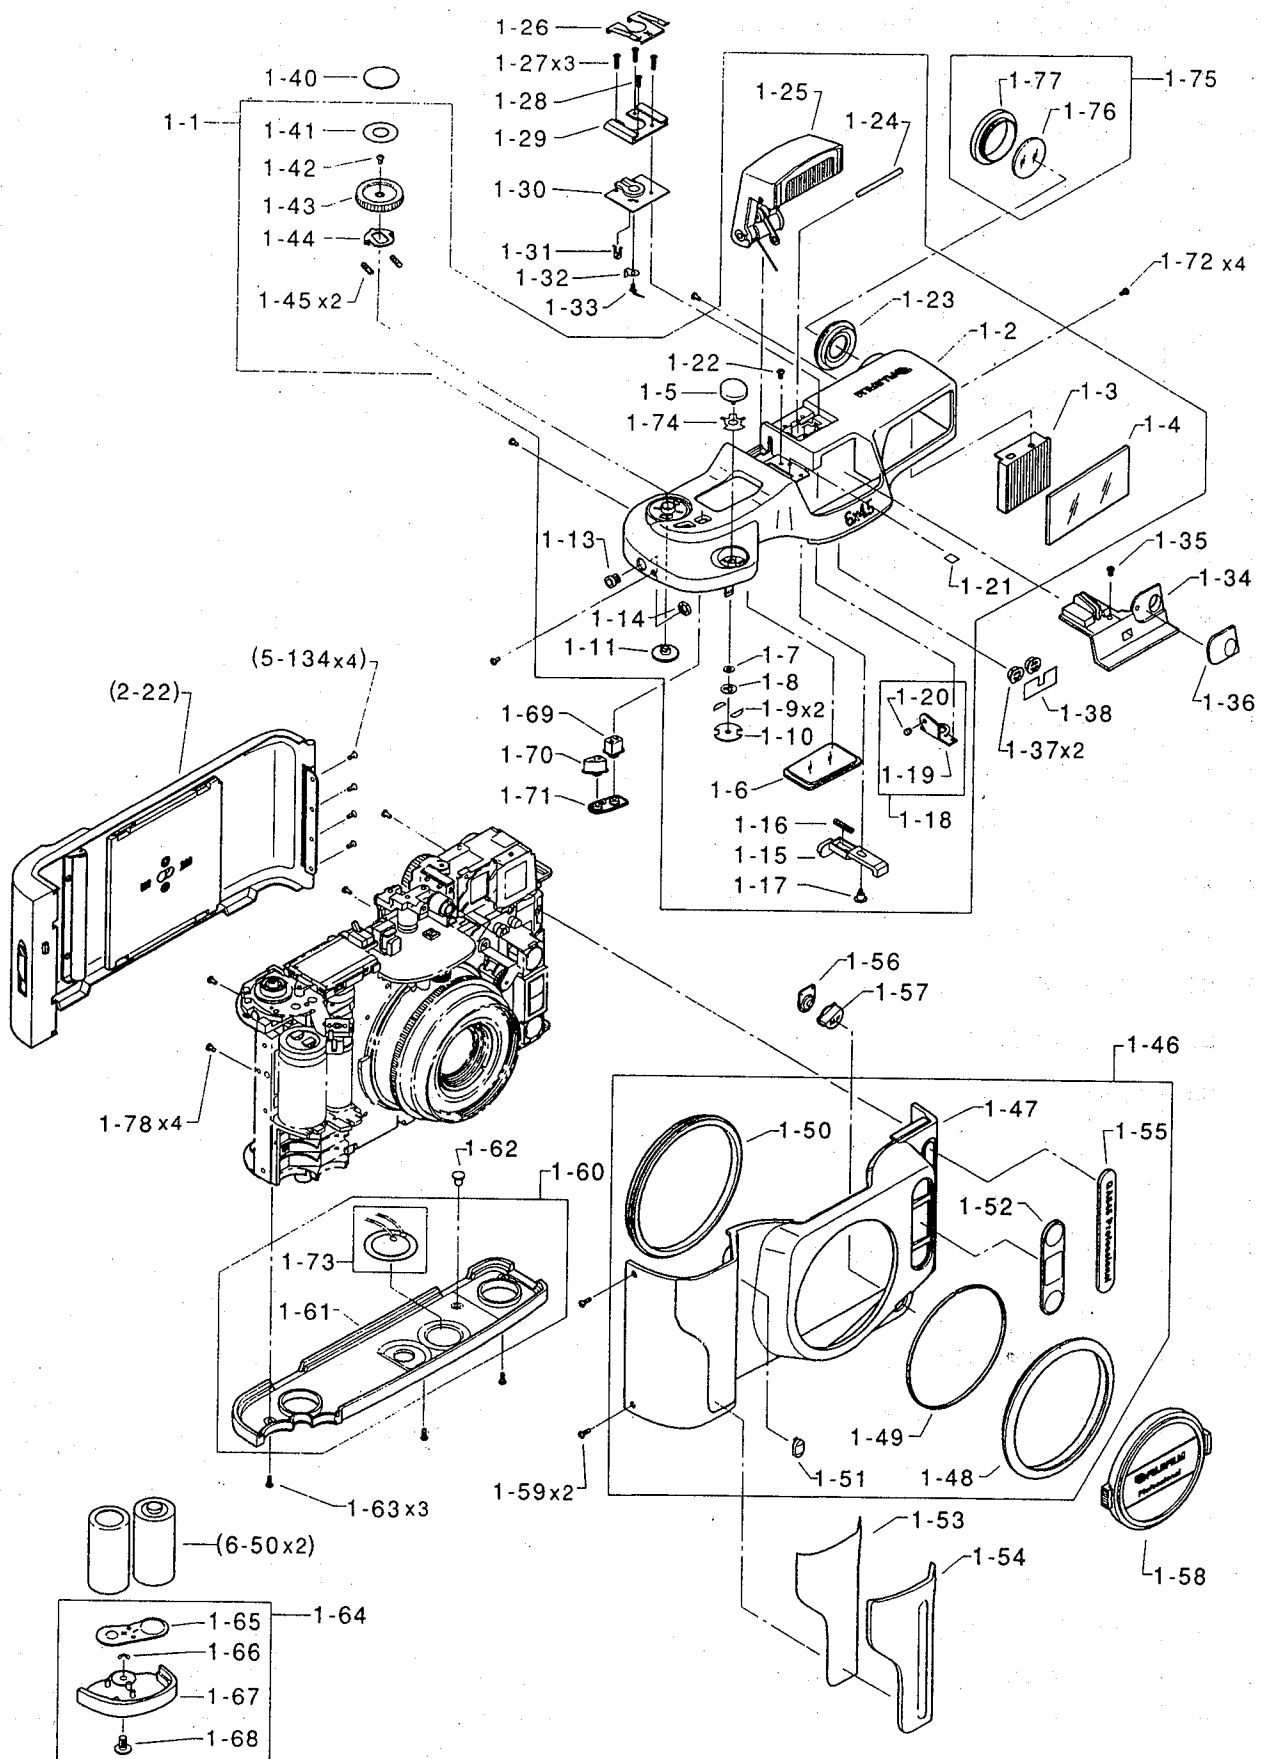

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|------------------------------------|------|------------------------|---------|--|
| ✓ 1- 34 | 11B 7824660 | Flash cover | 1 | ○ | | |
| 1- 35 | 110M 170402M | Screw | 1 | ○ | | |
| ✓ 1- 36 | 6B 7824690 | AE window | 1 | ○ | | |
| ✓ 1- 37 | 16B 7284530 | Self-timer button | 2 | ○ | | |
| ✓ 1- 38 | 85B 7822560 | Sliding plate | 1 | ○ | | |
| ✓ 1- 40 | 58B 7822590 | Name plate | 1 | ○ | | |
| 1- 41 | 187B 7824780 | Adhesive tape | 1 | ○ | | |
| 1- 42 | 113M 170452M | Screw | 1 | ○ | | |
| 1- 43 | 16B 7824570 | Button | 1 | ○ | | |
| 1- 44 | 82B 7825150 | Click plate | 1 | ○ | | |
| 1- 45 | 50B 7825180 | Spring | 2 | ○ | | |
| ✓ 1- 46 | 303A 7821820 | Front cover assembly | 1 | ○ | | |
| 1- 47 | 11B 7822060 | Front cover | 1 | ○ | | |
| 1- 48 | 27B 7822160 | Cover ring | 1 | ○ | | |
| 1- 49 | 27B 7822170 | Light shielding cloth | 1 | ○ | | |
| 1- 50 | 23B 7822150 | Light shielding ring | 1 | ○ | | |
| 1- 51 | 6B 7822100 | Self-timer window | 1 | ○ | | |
| 1- 52 | 6B 7822090 | AF window | 1 | ○ | | |
| 1- 53 | 187B 7822570 | Adhesive tape | 1 | ○ | | |
| ✓ 1- 54 | 11B 7822110 | Grip | 1 | ○ | | |
| ✓ 1- 55 | 58A 7821910 | Name plate assembly | 1 | ○ | | |
| ✓ 1- 56 | 109B 7822070 | Rubber switch | 1 | ○ | | |
| ✓ 1- 57 | 16B 7822080 | Focus lock button | 1 | ○ | | |
| ✓ 1- 58 | 57A 7821900 | Lens cap assembly | 1 | ○ | | |
| 1- 59 | 113M 170403U | Screw | 2 | ○ | | |
| ✓ 1- 60 | 11A 7821930 | Bottom cover assembly | 1 | ○ | | |
| 1- 61 | 11B 7822310 | Bottom cover | 1 | ○ | | |
| 1- 62 | 16B 7822350 | FW button | 1 | ○ | | |
| 1- 63 | 110M 170403U | Screw | 3 | ○ | | |
| ✓ 1- 64 | 10A 7821840 | Battery compartment cover assembly | 1 | ○ | | |
| 1- 65 | 109B 7822330 | Battery contact | 1 | ○ | | |
| 1- 66 | 191M 020T | E-clip | 1 | ○ | | |


Fig. 1

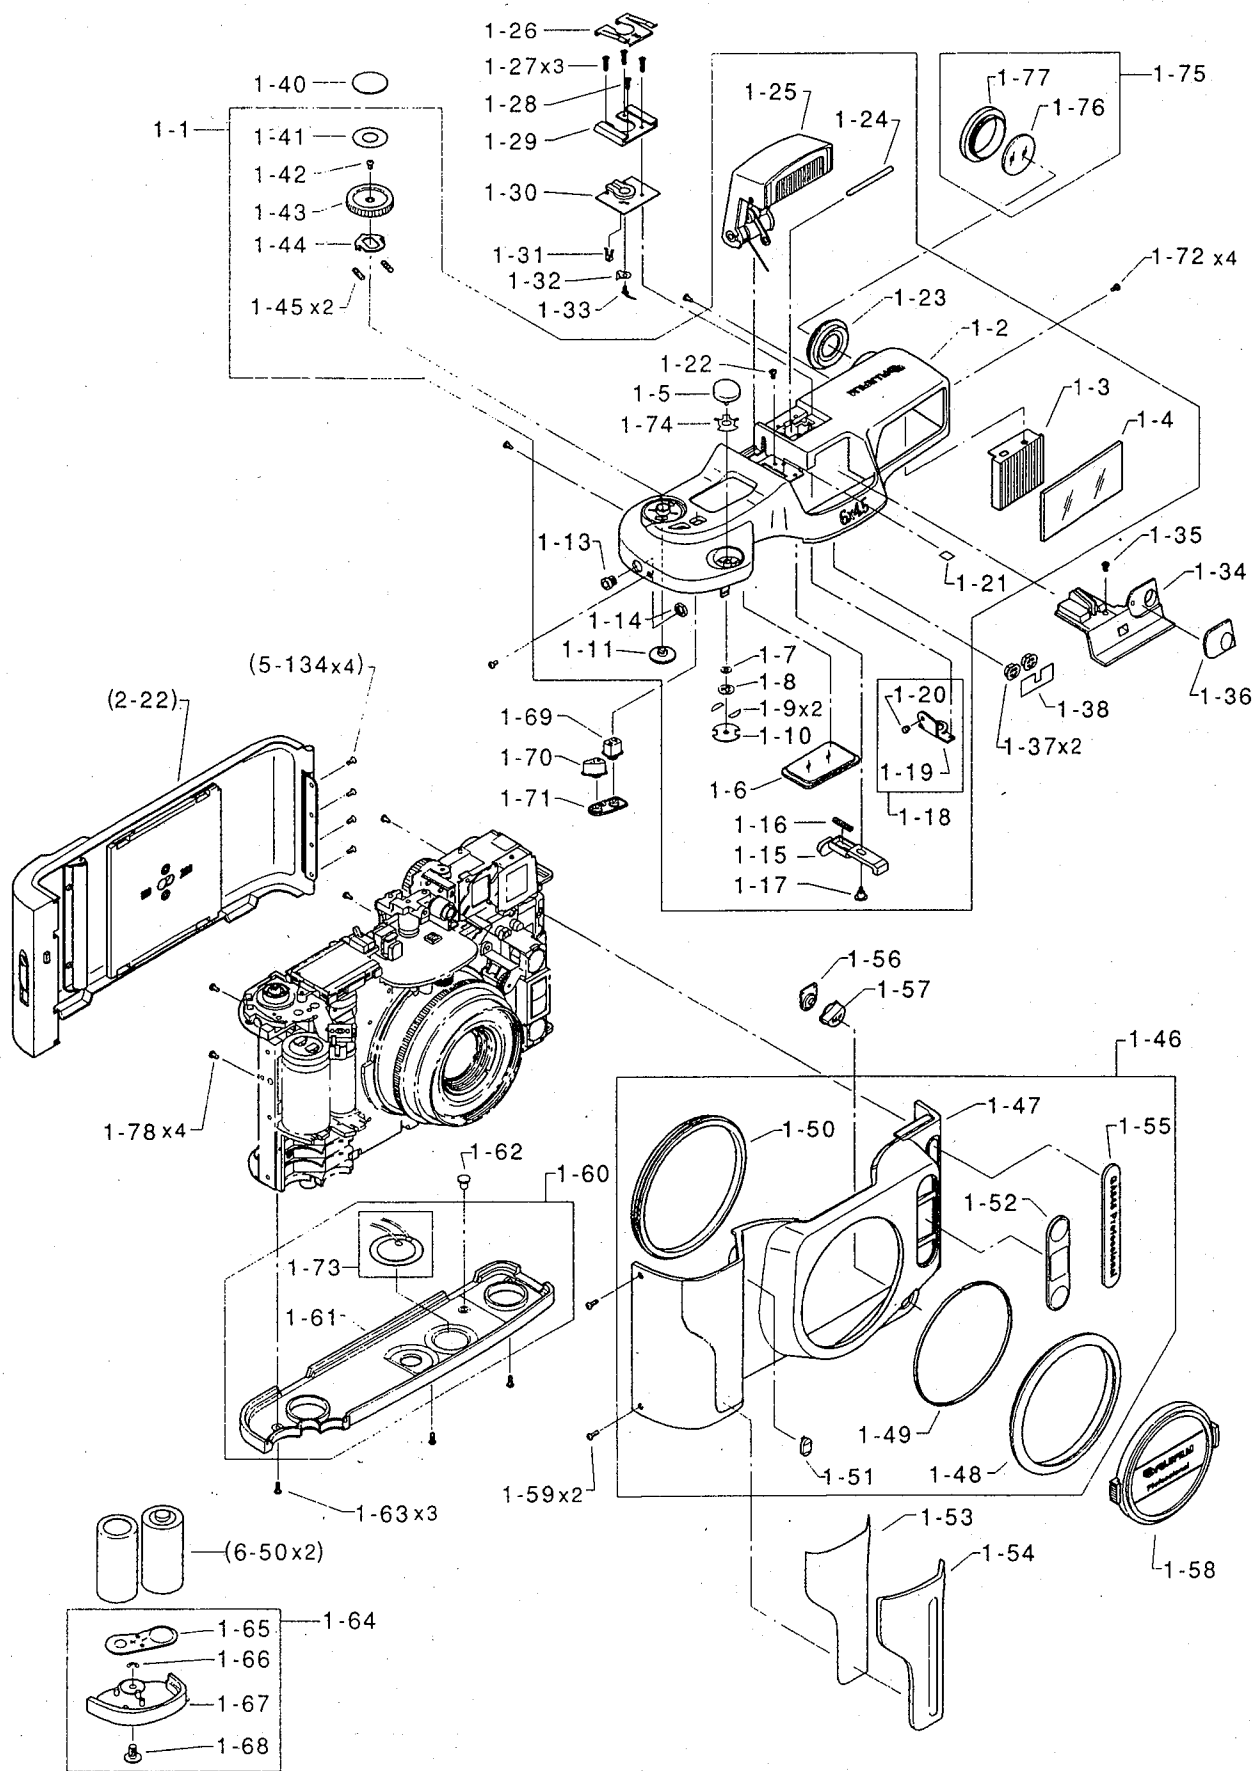

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--|---------------------------|------|------------------------|---------|--|
| 1- 67 | 11B 7822320 | Battery compartment cover | 1 | ○ | | |
| 1- 68 | 53B 7822340 | Set screw | 1 | ○ | | |
| 1- 69 | 16B 7824510 | FR button | 1 | ○ | | |
| 1- 70 | 16B 7224520 | MF button | 1 | ○ | | |
| 1- 71 | 109B 7824540 | Rubber switch | 1 | ○ | | |
| 1- 72 | 110M 170403U | Screw | 4 | ○ | | |
| 1- 73 | 131B 7830730 | Buzzer | 1 | ○ | | |
| 1- 74 | 58B 7824410 | Blind cover | 1 | ○ | | |
| 1- 75 | 23A 3280631 | Eyepiece assembly | 1 | ○ | GS645S | |
| 1- 76 | 23B 95585 23A 6774311 | Eyepiece window glass | 1 | × | | |
| 1- 77 | 23A 6774311 23B 95585 | Eyepiece frame | 1 | × | | |
| 1- 78 | 113M 170501U | Screw | 4 | ○ | | |


Fig. 2

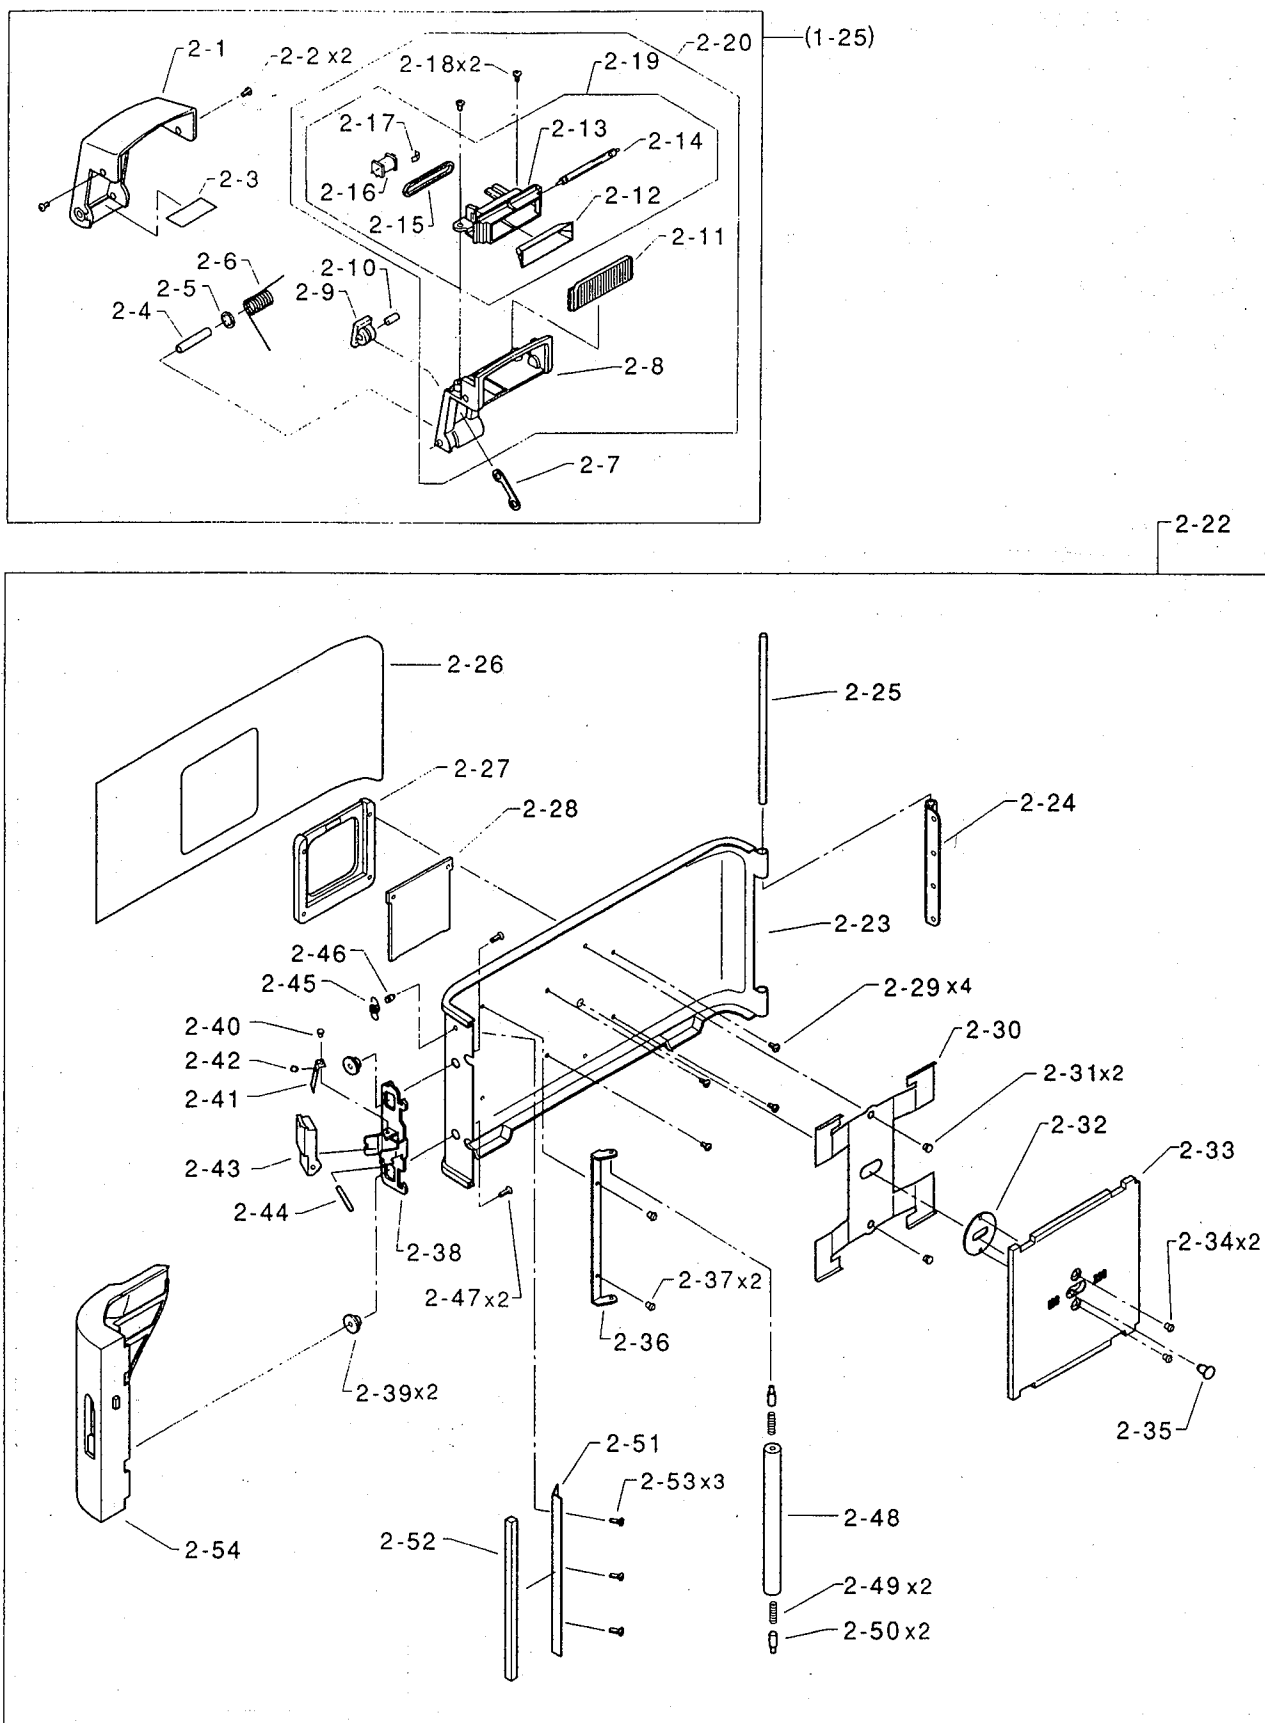

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|----------------------|------|------------------------|---------|--|
| 2- 1 | 11B 7828101 | Flash outer cover | 1 | ○ | | |
| 2- 2 | 113M 170352M | Screw | 2 | ○ | | |
| 2- 3 | 58B 7828220 | Blind | 1 | ○ | | |
| 2- 4 | 32B 7828130 | Sleeve | 1 | ○ | | |
| 2- 5 | 55B 7824460 | Washer | 1 | ○ | | |
| 2- 6 | 50B 7828110 | Spring | 1 | ○ | | |
| 2- 7 | 48B 7828160 | Link | 1 | ○ | | |
| 2- 8 | 11B 7828020 | Flash inner cover | 1 | ○ | | |
| 2- 9 | 29B 7828140 | Slider | 1 | ○ | | |
| 2- 10 | 32B 7828150 | Slide shaft | 1 | ○ | | |
| 2- 11 | 6B 7828010 | Protector lens | 1 | ○ | | |
| 2- 12 | 3B 7827990 | Reflector | 1 | ○ | | |
| 2- 13 | 12B 7828000 | Reflector case | 1 | ○ | | |
| 2- 14 | 127B 7827980 | Xenon tube | 1 | ○ | | |
| 2- 15 | 25B 7828030 | Silicon belt | 1 | ○ | | |
| 2- 16 | 104B 7828240 | Trigger coil | 1 | ○ | | |
| 2- 17 | 85B 7828040 | Trigger contact | 1 | ○ | | |
| 2- 18 | 113M 170402M | Screw | 2 | ○ | | |
| 2- 20 | 330A 7827810 | Flash assembly | 1 | ○ | | |
| 2- 22 | 302A 7825310 | Camera back assembly | 1 | ○ | | |
| 2- 23 | 11B 7825450 | Camera back | 1 | × | | |
| 2- 24 | 19B 32024 | Hinge | 1 | × | | |
| 2- 25 | 32B 32032 | Hinge shaft | 1 | × | GS645S | |
| 2- 26 | 59B 7825560 | Leather | 1 | ○ | | |
| 2- 27 | 12B 7825500 | Pocket | 1 | × | | |
| 2- 28 | 58B 3287212 | Cover plate | 1 | × | GW690-3 | |
| 2- 29 | 113M 170221M | Screw | 4 | × | | |
| 2- 30 | 50B 7825460 | Compression spring | 1 | × | | |
| 2- 31 | 170M 20010F | Rivet | 2 | × | | |
| 2- 32 | 87B 7825470 | Stopper | 1 | × | | |
| 2- 33 | 44B 7825480 | Pressure plate | 1 | × | | |
| 2- 34 | 17B 3287250 | Rivet | 2 | × | GS645S | |


Fig. 2

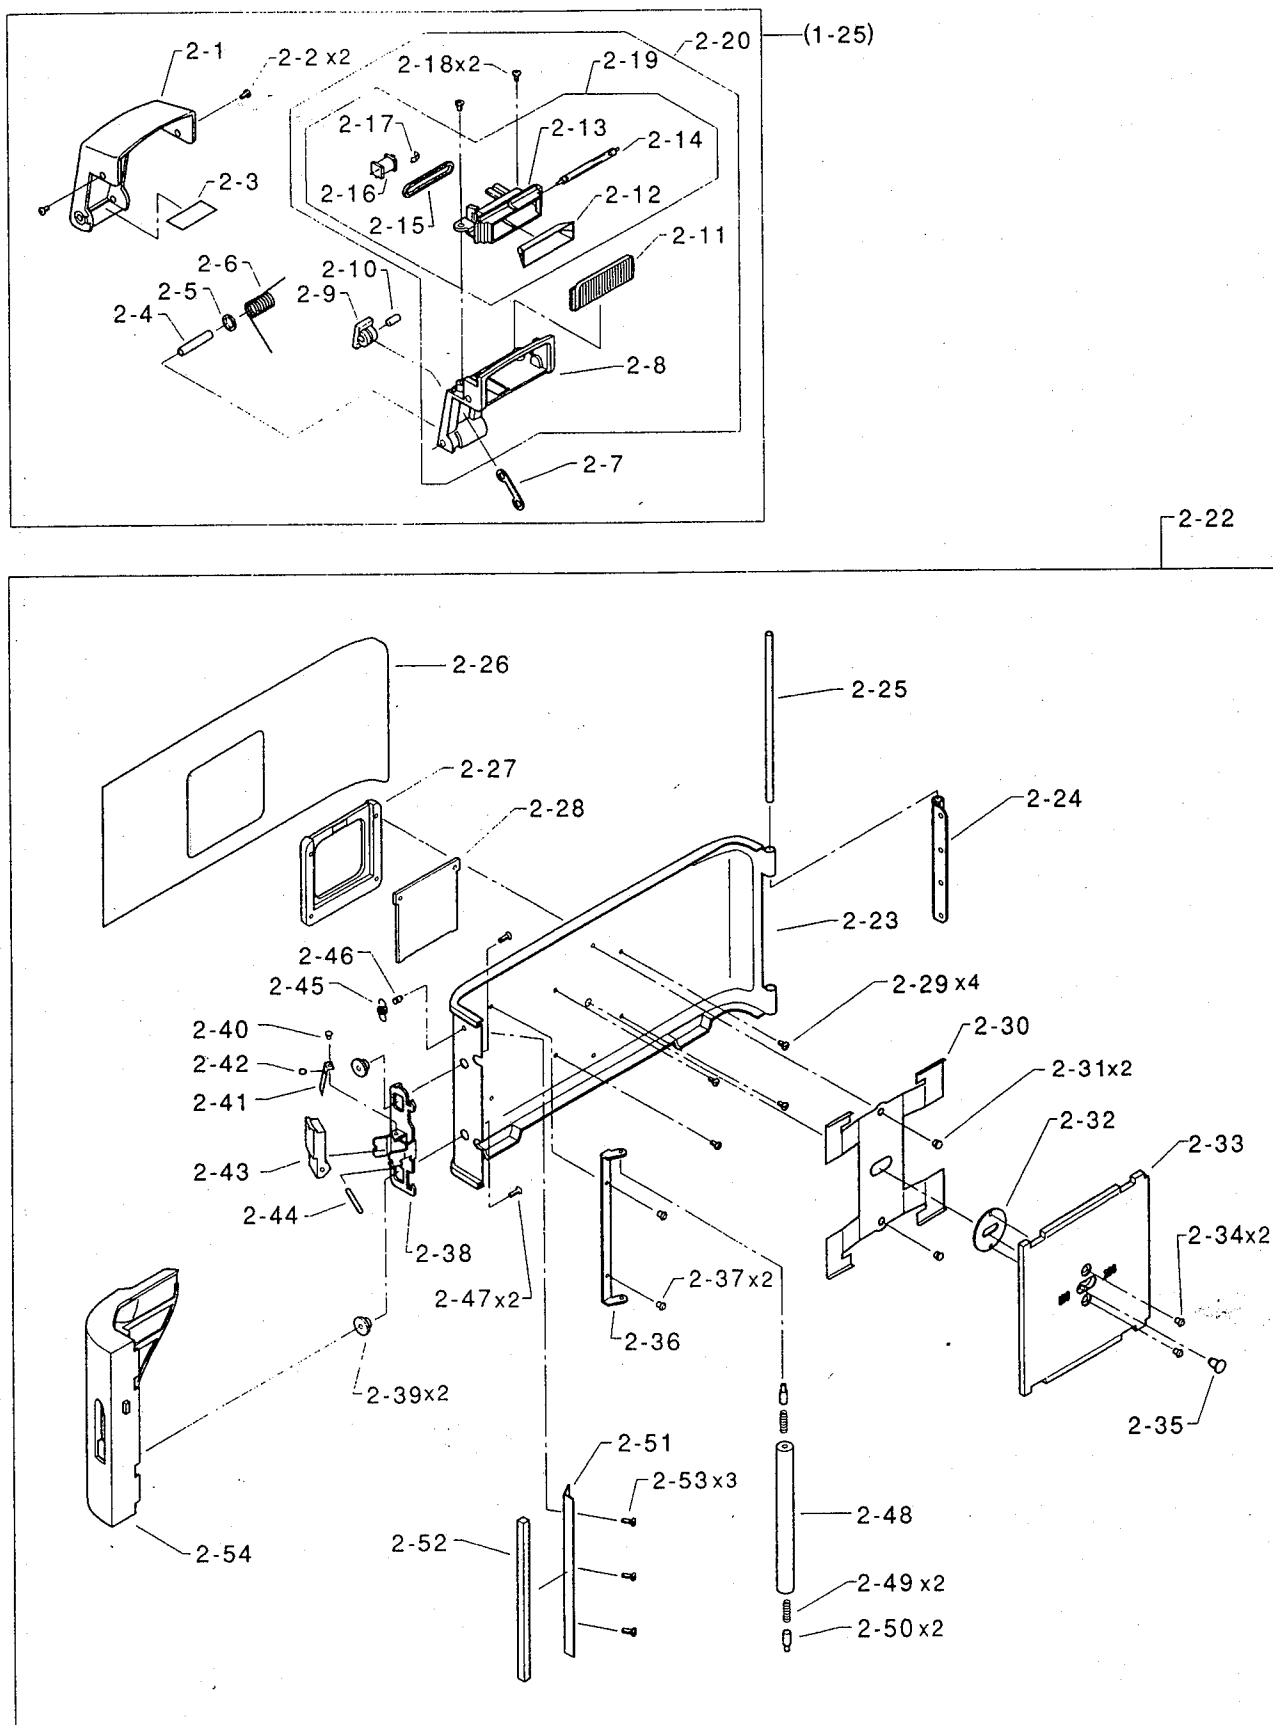

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|-----------------------|------|------------------------|---------|--|
| 2- 35 | 32B 3287163 | Guide shaft | 1 | × | GS645S | |
| 2- 36 | 85B 3287221 | Roller supporter | 1 | × | GS645S | |
| 2- 37 | 17B 3287250 | Rivet | 2 | × | GS645S | |
| 2- 38 | 45B 7825510 | Hook | 1 | × | | |
| 2- 39 | 17B 7825610 | Guide pin | 2 | × | | |
| 2- 40 | 170M 15016B | Rivet | 1 | × | | |
| 2- 41 | 50B 7825590 | Leaf spring | 1 | × | | |
| 2- 42 | 17B 7825600 | Stopper pin | 1 | × | | |
| 2- 43 | 16B 7825520 | Camera back lock knob | 1 | ○ | | |
| 2- 44 | 17B 7825580 | Shaft | 1 | ○ | | |
| 2- 45 | 50B 3287393 | Spring | 1 | ○ | GS645S | |
| 2- 46 | 17B 3287381 | Pin | 1 | × | GW690-3 | |
| 2- 47 | 114M 200503M | Screw | 2 | ○ | | |
| 2- 48 | 37B 492633 | Roller | 1 | ○ | GW690-3 | |
| 2- 49 | 50B 30172 | Spring | 2 | ○ | GW690-3 | |
| 2- 50 | 17B 30160 | Pin | 2 | ○ | GW690-3 | |
| 2- 51 | 27B 7825490 | Light shielding plate | 1 | ○ | | |
| 2- 52 | 27B 32000 | Moquette | 1 | ○ | GS645S | |
| 2- 53 | 113M 200501M | Screw | 3 | ○ | | |
| 2- 54 | 11B 7825550 | Grip | 1 | ○ | | |


Fig. 3

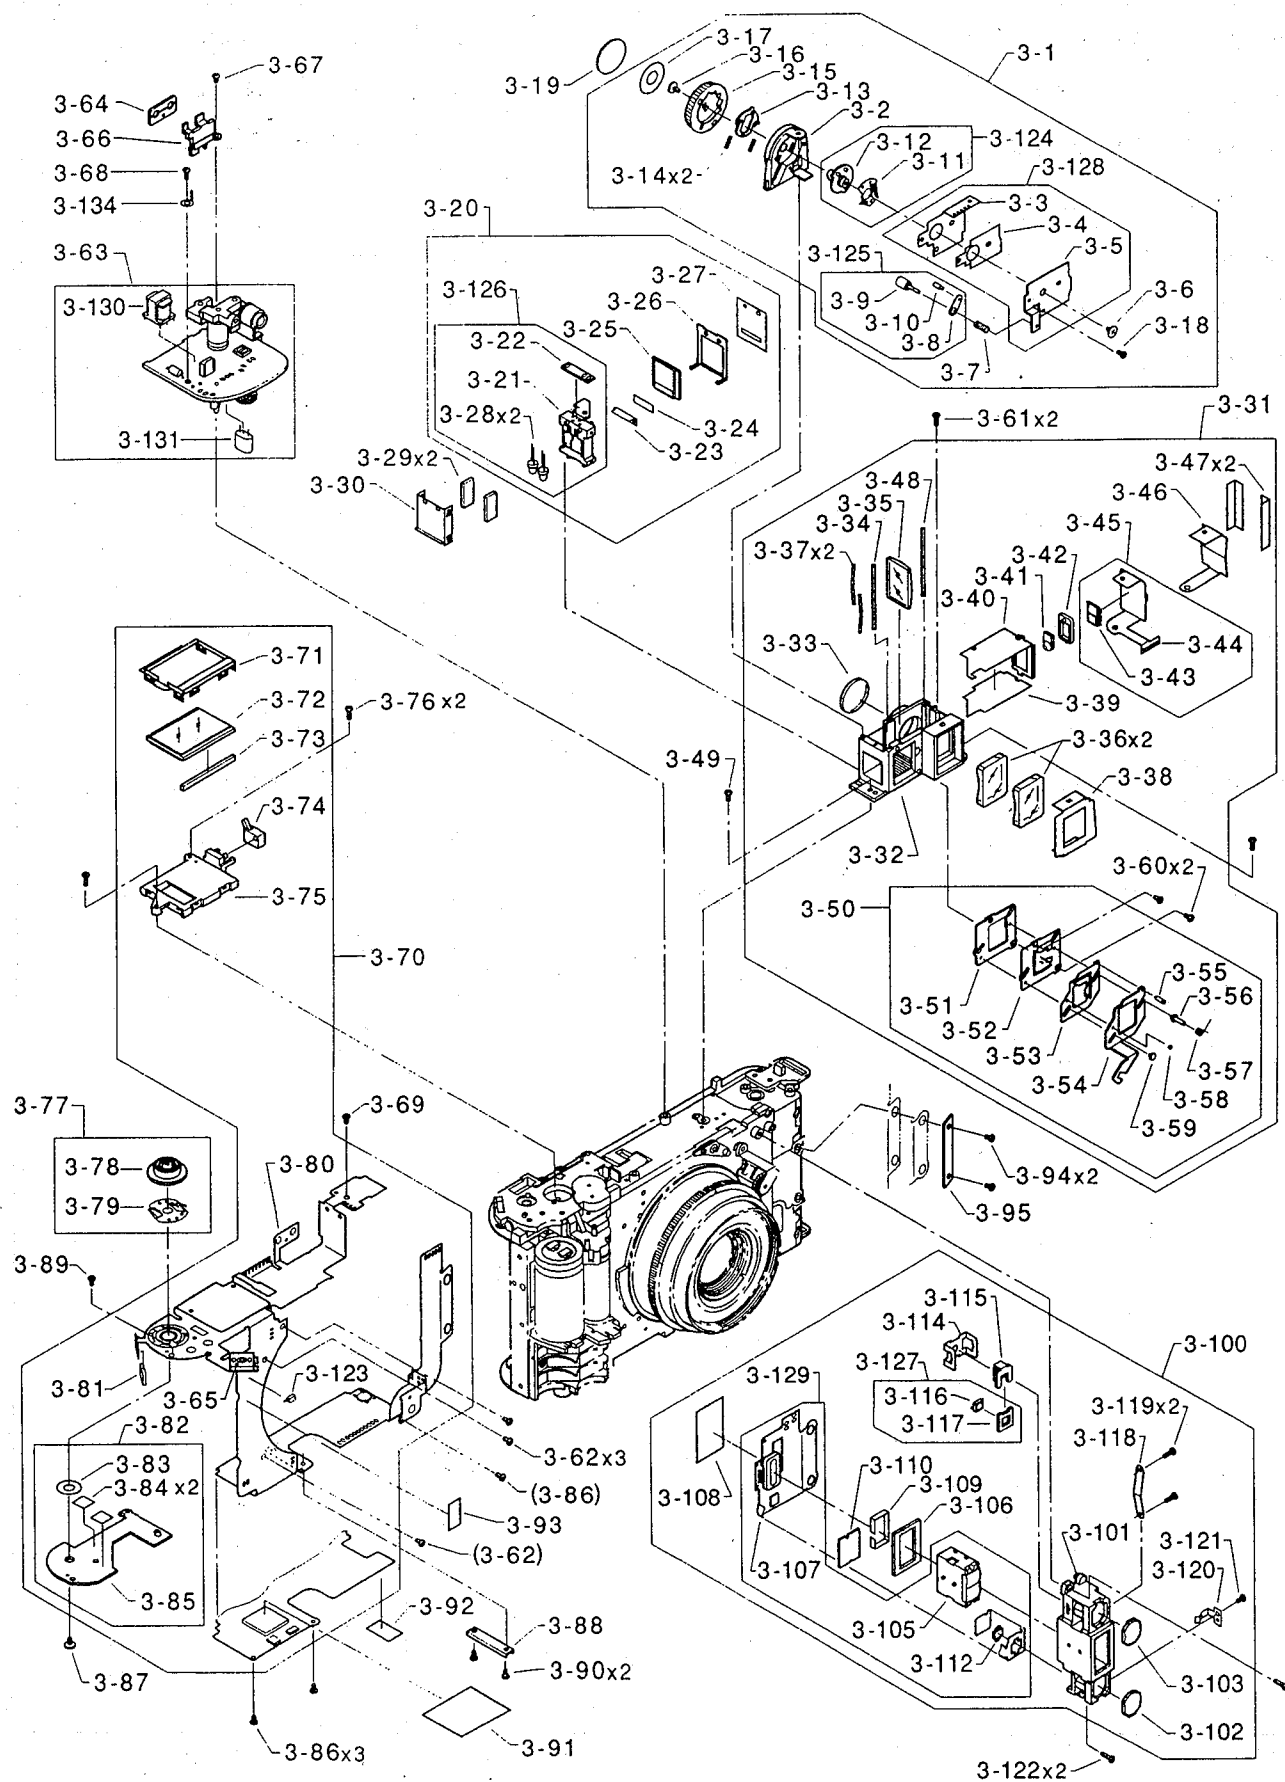

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|-----------------------|------|------------------------|-----------|---------|
| * 3- 1 | 46A 7824810 | Mode switch assembly | 1 | ○ | | 26/2/98 |
| 3- 2 | 82B 7825140 | Mode switch frame | 1 | ○ | | |
| 3- 3 | 110B 7830820 | Mode switch FPCB | 1 | ○ | | |
| 3- 4 | 187B 7825260 | Adhesive tape | 1 | ○ | | |
| 3- 5 | 46B 7825060 | Base plate | 1 | ○ | | |
| 3- 6 | 53B 7024832 | Screw | 1 | ○ | ZOOM 200D | |
| 3- 7 | 50B 7825080 | Spring | 1 | ○ | | |
| 3- 8 | 86B 7825240 | Lock lever | 1 | × | | |
| 3- 9 | 16B 7825230 | Release button | 1 | × | | |
| 3- 10 | 32B 7825220 | Lock pin | 1 | × | | |
| 3- 11 | 109B 7285130 | Switch contact | 1 | × | | |
| 3- 12 | 29B 7825120 | Contact seat | 1 | × | | |
| 3- 13 | 82B 7825150 | Click plate | 1 | ○ | | |
| 3- 14 | 50B 7825180 | Spring | 2 | ○ | | |
| 3- 15 | 16B 7825160 | Select dial | 1 | ○ | | |
| 3- 16 | 53B 7824832 | Screw | 1 | ○ | ZOOM 200D | |
| 3- 17 | 187B 7825030 | Adhesive tape | 1 | ○ | | |
| 3- 18 | 113M 170301M | Screw | 1 | ○ | | |
| 3- 19 | 58B 7822580 | Name plate | 1 | ○ | | |
| 3- 20 | 103A 7830340 | FLCD assembly | 1 | ○ | | |
| 3- 21 | 41B 7830370 | FLCD frame | 1 | × | | |
| 3- 22 | 110B 7830430 | PCB | 1 | × | | |
| 3- 23 | 2B 7830420 | Prism | 1 | ○ | | |
| 3- 24 | 6B 7830410 | Diffuser | 1 | ○ | | |
| 3- 25 | 103B 7830320 | Prism | 1 | ○ | | |
| 3- 26 | 79B 7830400 | FLCD holder | 1 | ○ | | |
| 3- 27 | 27B 7828570 | Light shielding plate | 1 | ○ | | |
| 3- 28 | 106K 998970 | LED | 2 | × | | |
| 3- 29 | 113B 7830520 | Connector | 2 | ○ | | |
| 3- 30 | 79B 7830390 | FPCB holder | 1 | ○ | | |
| 3- 31 | 326A 7828310 | Viewfinder assembly | 1 | ○ | | |
| 3- 32 | 10B 7828450 | Viewfinder chassis | 1 | × | | |


Fig. 3

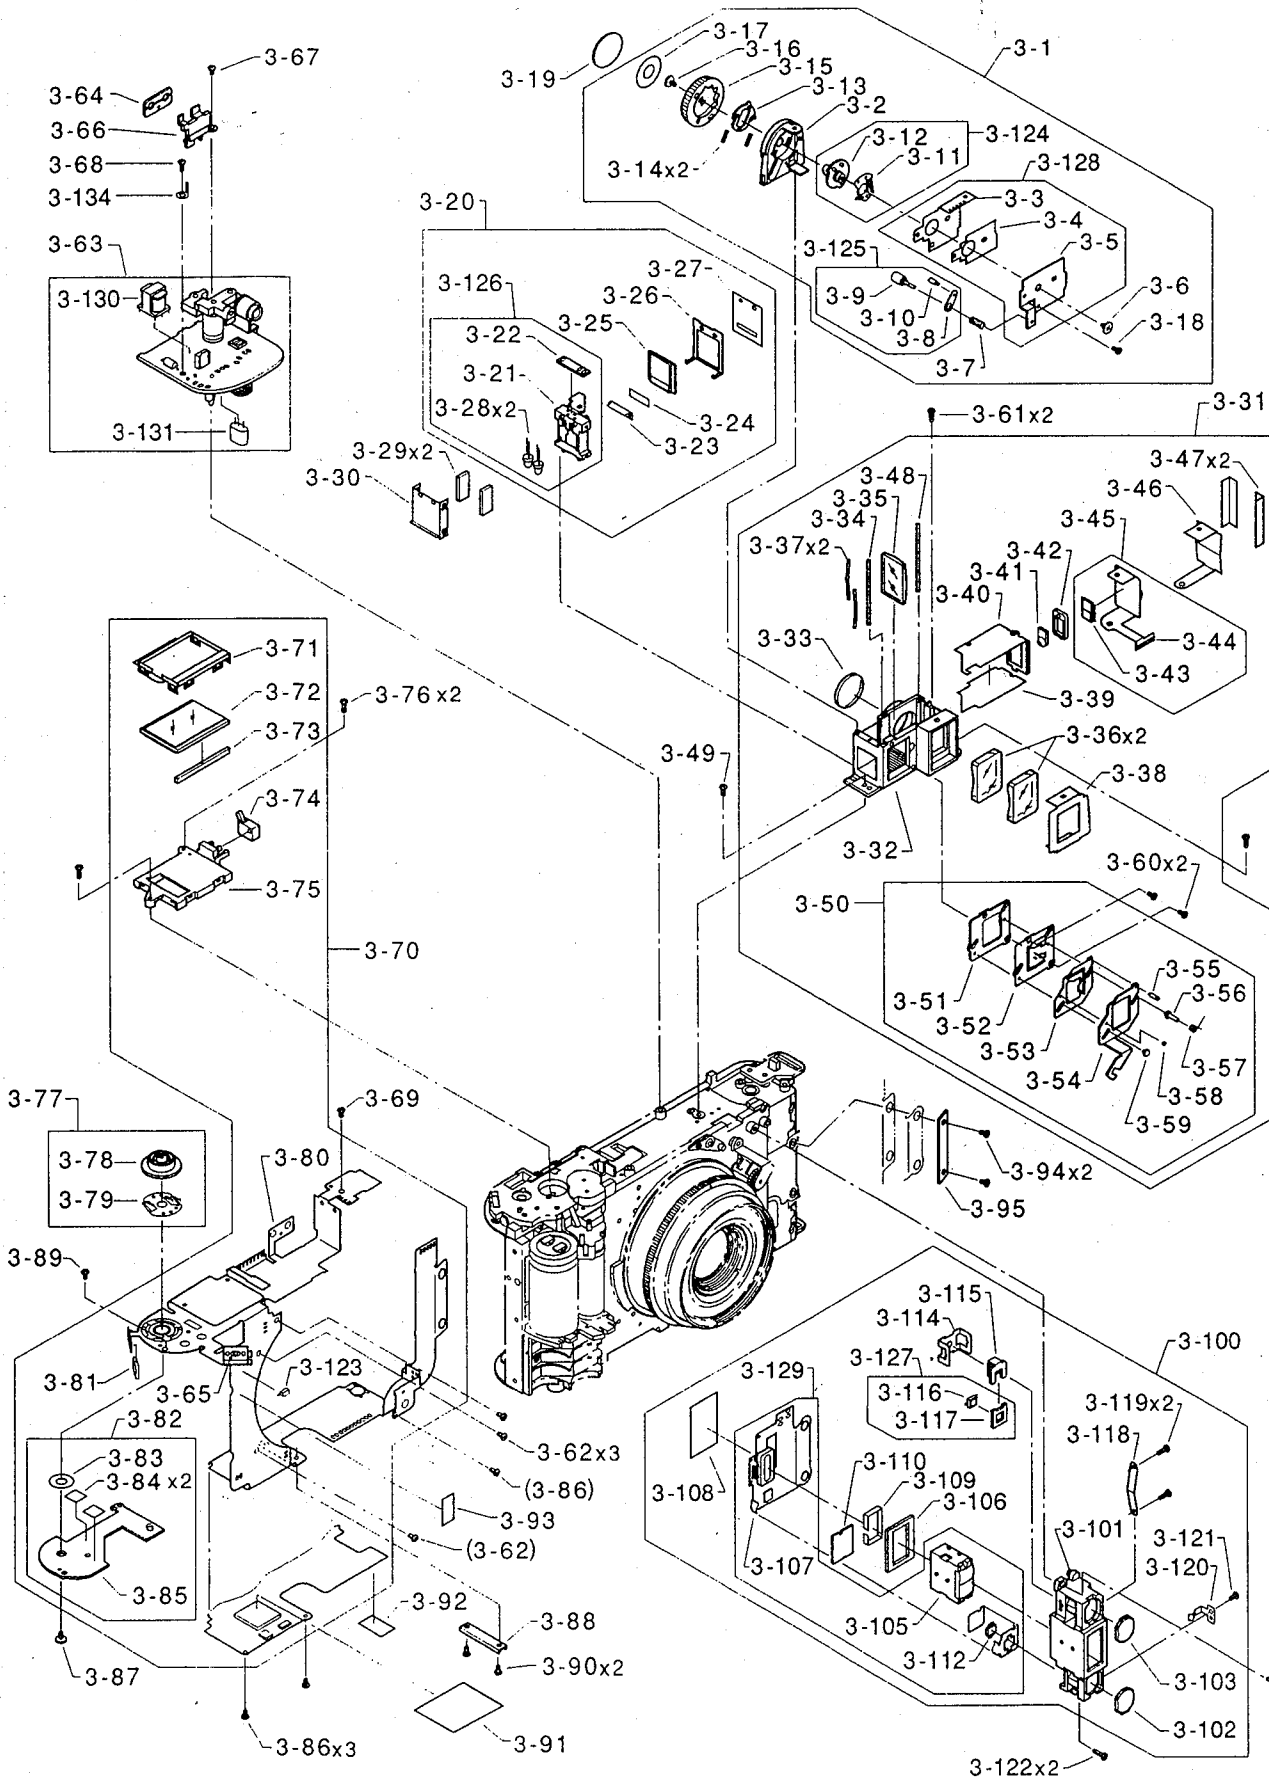

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|--------------------|------|------------------------|---------|--|
| 3- 33 | 1B 7763950 | Lens G3 | 1 | × | | |
| 3- 34 | 3B 7764360 | Mirror G6 | 1 | × | | |
| 3- 35 | 1B 7763960 | Lens G5 | 1 | × | | |
| 3- 36 | 1B 7763940 | Lens G1-G2 | 2 | ○ | | |
| 3- 37 | 85B 7828680 | Reinforcing plate | 2 | × | | |
| 3- 38 | 79B 7828560 | Lens holder | 1 | ○ | | |
| 3- 39 | 187B 7828600 | Adhesive tape | 1 | ○ | | |
| 3- 40 | 11B 7828530 | Top cover | 1 | ○ | | |
| 3- 41 | 1B 8124320 | Lens | 1 | × | | |
| 3- 42 | 41B 7822510 | Frame | 1 | × | | |
| 3- 43 | 106B 7830740 | IC | 1 | × | | |
| 3- 44 | 110B 7830900 | FPCB | 1 | × | | |
| 3- 45 | 110A 7829930 | FPCB assembly | 1 | ○ | | |
| 3- 46 | 11B 7828550 | FPCB holder | 1 | ○ | | |
| 3- 47 | 187B 7828230 | Photographic tape | 2 | ○ | | |
| 3- 48 | 3B 7764350 | Mirror G5 | 1 | × | | |
| 3- 49 | 110M 170252M | Screw | 2 | ○ | | |
| 3- 50 | 5A 7828400 | Reticle assembly | 1 | ○ | | |
| 3- 51 | 46B 7828460 | Reticle frame 1 | 1 | × | | |
| 3- 52 | 5B 7828470 | Reticle 1 | 1 | × | | |
| 3- 53 | 5B 7828490 | Reticle 2 | 1 | × | | |
| 3- 54 | 29B 7828480 | Reticle frame 2 | 1 | × | | |
| 3- 55 | 17B 7828590 | Pin | 1 | × | | |
| 3- 56 | 17B 7828580 | Guide pin | 1 | × | | |
| 3- 57 | 50B 7828520 | Spring | 1 | ○ | | |
| 3- 58 | 17B 7822510 | Pin 2 | 1 | × | | |
| 3- 59 | 17B 7828500 | Pin 1 | 1 | × | | |
| 3- 60 | 113M 170302M | Screw | 2 | ○ | | |
| 3- 61 | 110M 200402M | Screw | 2 | ○ | | |
| 3- 62 | 110M 170201N | Screw | 3 | ○ | | |
| 3- 63 | 110A 7827820 | Flash PCB assembly | 1 | ○ | | |
| 3- 64 | 109B 7824700 | Rubber switch | 1 | ○ | | |


Fig. 3

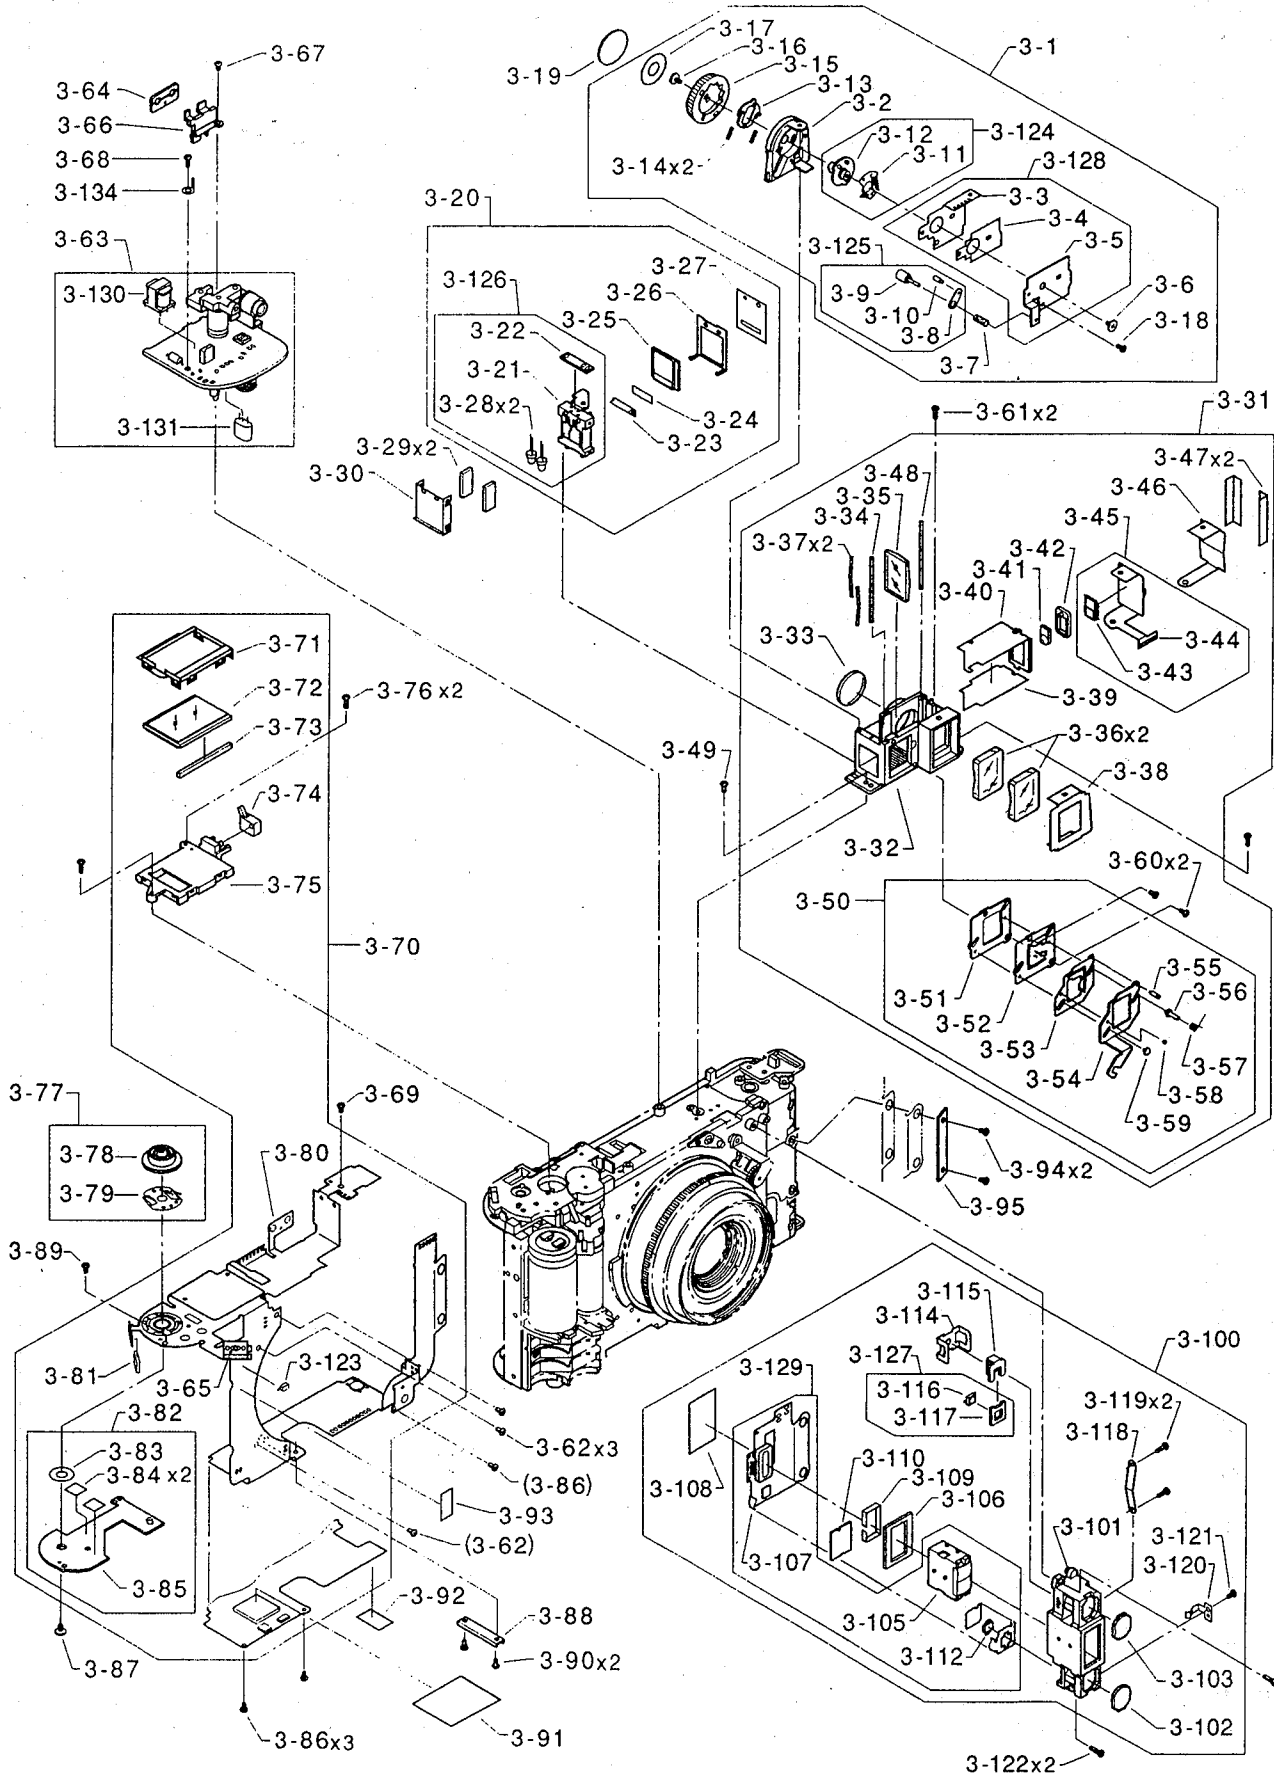

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|----------------------------|------|------------------------|----------|--|
| 3- 65 | 121K 999310 | Tact switch | 1 | ○ | | |
| 3- 66 | 81B 7824710 | Switch holder | 1 | ○ | | |
| 3- 67 | 110M 170452M | Screw | 1 | ○ | | |
| 3- 68 | 53B 7822600 | Screw | 1 | ○ | | |
| 3- 69 | 110M 170402M | Screw | 1 | ○ | | |
| 3- 70 | 110A 7821810 | Control FPCB assembly | 1 | ○ | | |
| 3- 71 | 79B 7830380 | LCD holder | 1 | ○ | | |
| 3- 72 | 103B 7830310 | LCD panel | 1 | ○ | | |
| 3- 73 | 113B 7830510 | Connector | 1 | ○ | | |
| 3- 74 | 121K 999280 | Switch | 1 | ○ | | |
| 3- 75 | 41B 7830360 | LCD frame | 1 | ○ | | |
| 3- 76 | 113M 170602M | Screw | 2 | ○ | | |
| 3- 77 | 29A 7823820 | Contact assembly | 1 | ○ | | |
| 3- 78 | 29B 7824100 | Contact frame | 1 | × | | |
| 3- 79 | 109B 7824110 | Contact | 1 | × | | |
| 3- 80 | 110B 7830500 | Control FPCB | 1 | × | | |
| 3- 81 | 121K 999260 | Tact switch | 1 | ○ | | |
| 3- 82 | 46A 7823880 | Reinforcing plate assembly | 1 | × | | |
| 3- 83 | 187B 7824170 | Adhesive tape | 1 | × | | |
| 3- 84 | 187B 7057360 | Adhesive tape | 2 | × | ELITE OP | |
| 3- 85 | 46B 7824120 | FPCB reinforcing plate | 1 | × | | |
| 3- 86 | 110M 140252N | Screw | 3 | ○ | | |
| 3- 87 | 53B 7024830 | Screw | 1 | ○ | | |
| 3- 88 | 51B 7822420 | Metal fixture | 1 | ○ | | |
| 3- 89 | 113M 170302N | Screw | 1 | ○ | | |
| 3- 90 | 110M 170352M | Screw | 2 | ○ | | |
| 3- 91 | 58B 7822490 | Insulator | 1 | ○ | | |
| 3- 92 | 187B 7058510 | Adhesive tape | 1 | ○ | ELITE OP | |
| 3- 93 | 196B 7822400 | Tape | 1 | ○ | | |
| 3- 94 | 110M 170352M | Screw | 2 | ○ | | |
| 3- 95 | 41B 7822450 | Metal fixture | 1 | ○ | | |
| 3-100 | 313A 7829310 | AF system assembly | 1 | ○ | | |


Fig. 3

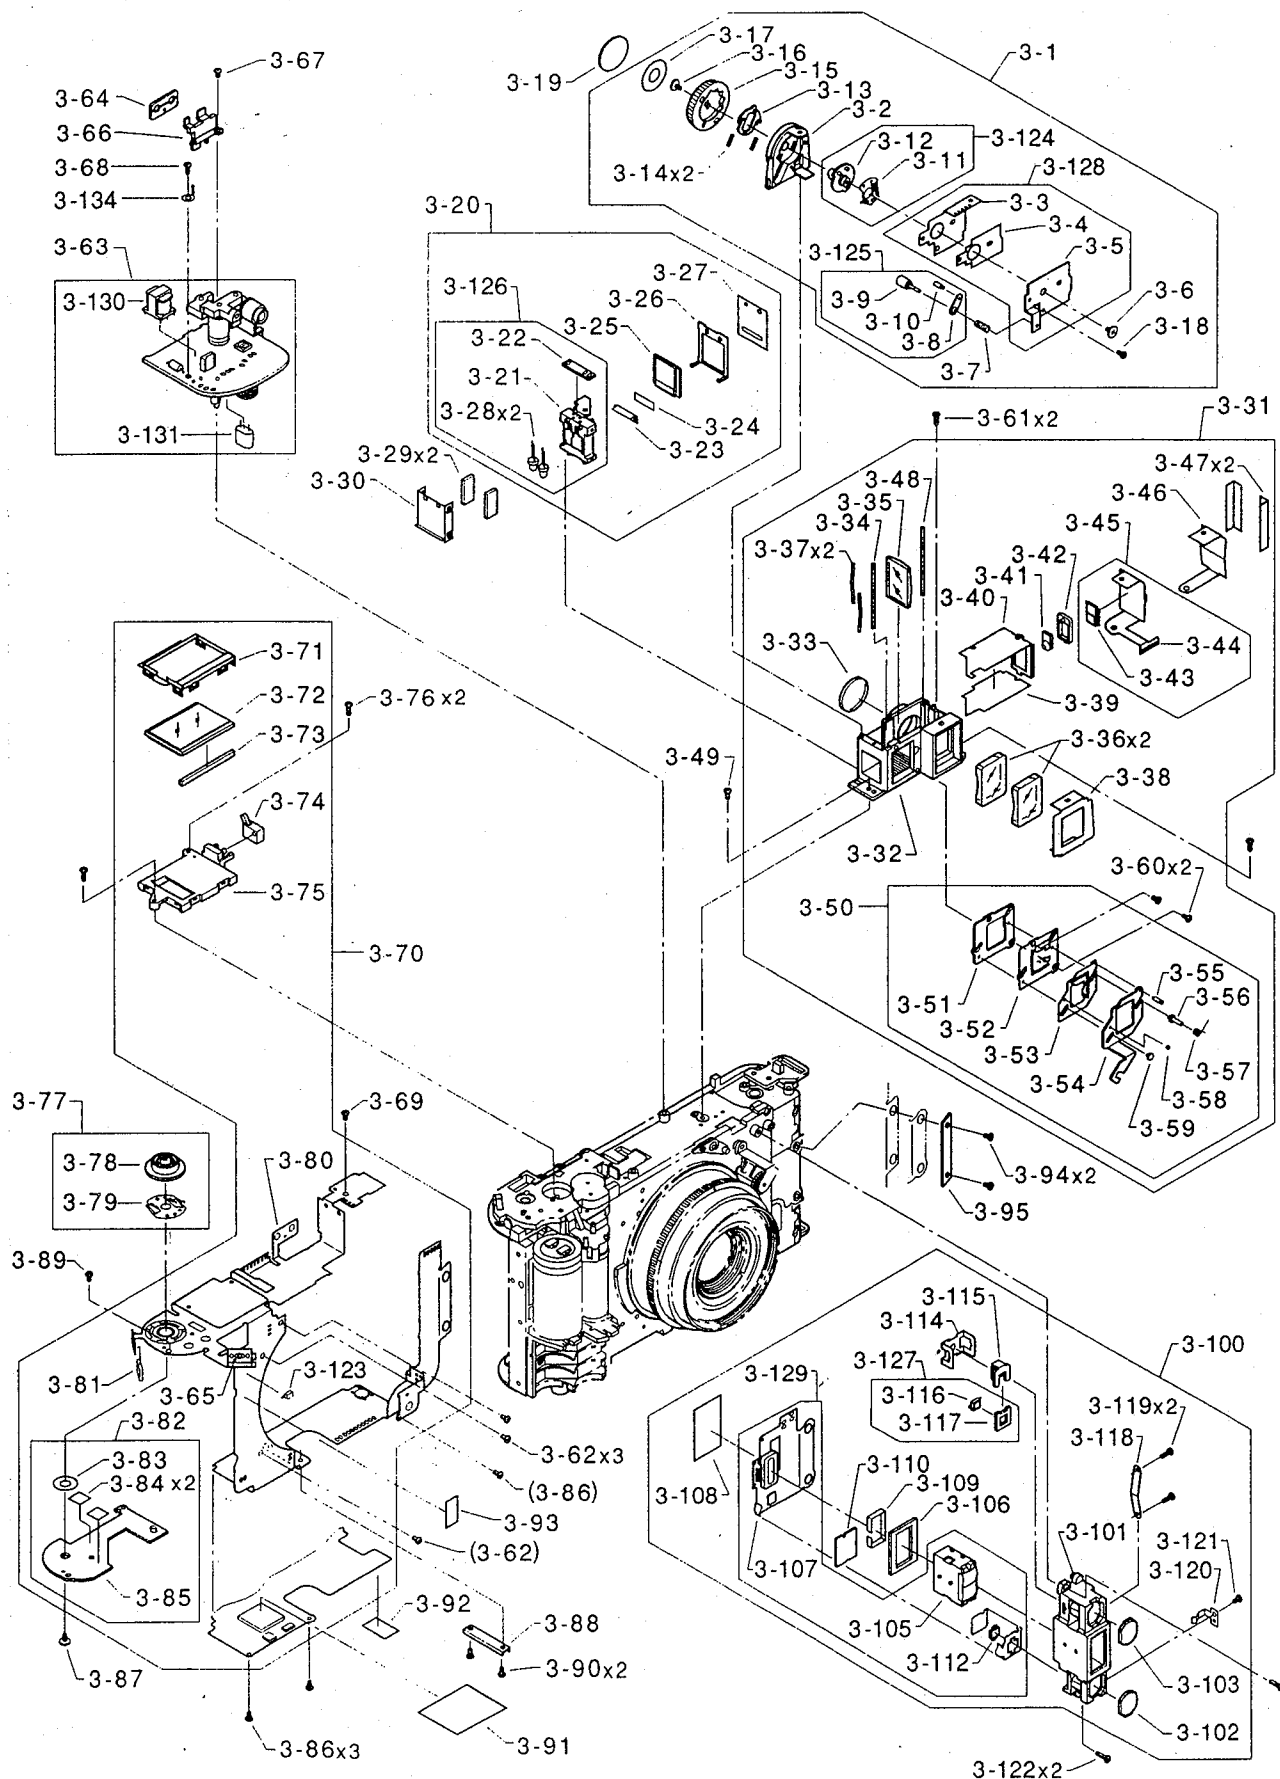

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|---------------------------|------|------------------------|---------|--|
| 3-101 | 10B 7829400 | AF system chassis | 1 | × | SPREME | |
| 3-102 | 1B 7336140 | Receiving lens | 1 | × | | |
| 3-103 | 1B 7336130 | Emitting lens | 1 | × | | |
| 3-105 | 106K 999800 | AF module | 1 | × | | |
| 3-106 | 27B 7829490 | Moquette | 1 | ○ | | |
| 3-107 | 110B 7829470 | AF FPCB | 1 | × | | |
| 3-108 | 27B 7829510 | Light shielding tape | 1 | ○ | | |
| 3-109 | 27B 7829480 | Light shielding tape | 1 | ○ | | |
| 3-110 | 27B 7829450 | Light shielding plate | 1 | ○ | | |
| 3-112 | 106B 7741370 | PSD | 1 | × | | |
| 3-114 | 41B 7829420 | Holder | 1 | × | | |
| 3-115 | 29B 7829410 | Frame | 1 | × | | |
| 3-116 | 106K 999830 | LED | 1 | × | | |
| 3-117 | 110B 7829460 | IREN-PCB | 1 | × | | |
| 3-118 | 41B 7829440 | Holder | 1 | ○ | | |
| 3-119 | 113M 170501M | Screw | 2 | ○ | | |
| 3-120 | 41B 7829430 | PSD holder | 1 | ○ | | |
| 3-121 | 113M 170251M | Screw | 1 | ○ | | |
| 3-122 | 110M 170502M | Screw | 2 | ○ | | |
| 3-123 | 106K 998960 | LED | 1 | ○ | | |
| 3-124 | 29A 7824840 | Contact assembly | 1 | ○ | | |
| 3-125 | 86A 7824830 | Lock lever assembly | 1 | ○ | | |
| 3-126 | 110A 7829940 | PCB assembly | 1 | ○ | | |
| 3-127 | 110A 7829980 | IREN-PCB assembly | 1 | × | | |
| 3-128 | 46A 7824820 | Mode switch FPCB assembly | 1 | ○ | | |
| 3-129 | 110A 7829970 | AF PCB assembly | 1 | ○ | | |
| 3-130 | 104B 7831670 | Transformer | 1 | ○ | | |
| 3-131 | 116K 1008620 | Capacitor | 1 | ○ | | |
| 3-134 | 108B 7822650 | Lug | 1 | ○ | | |


Fig. 4

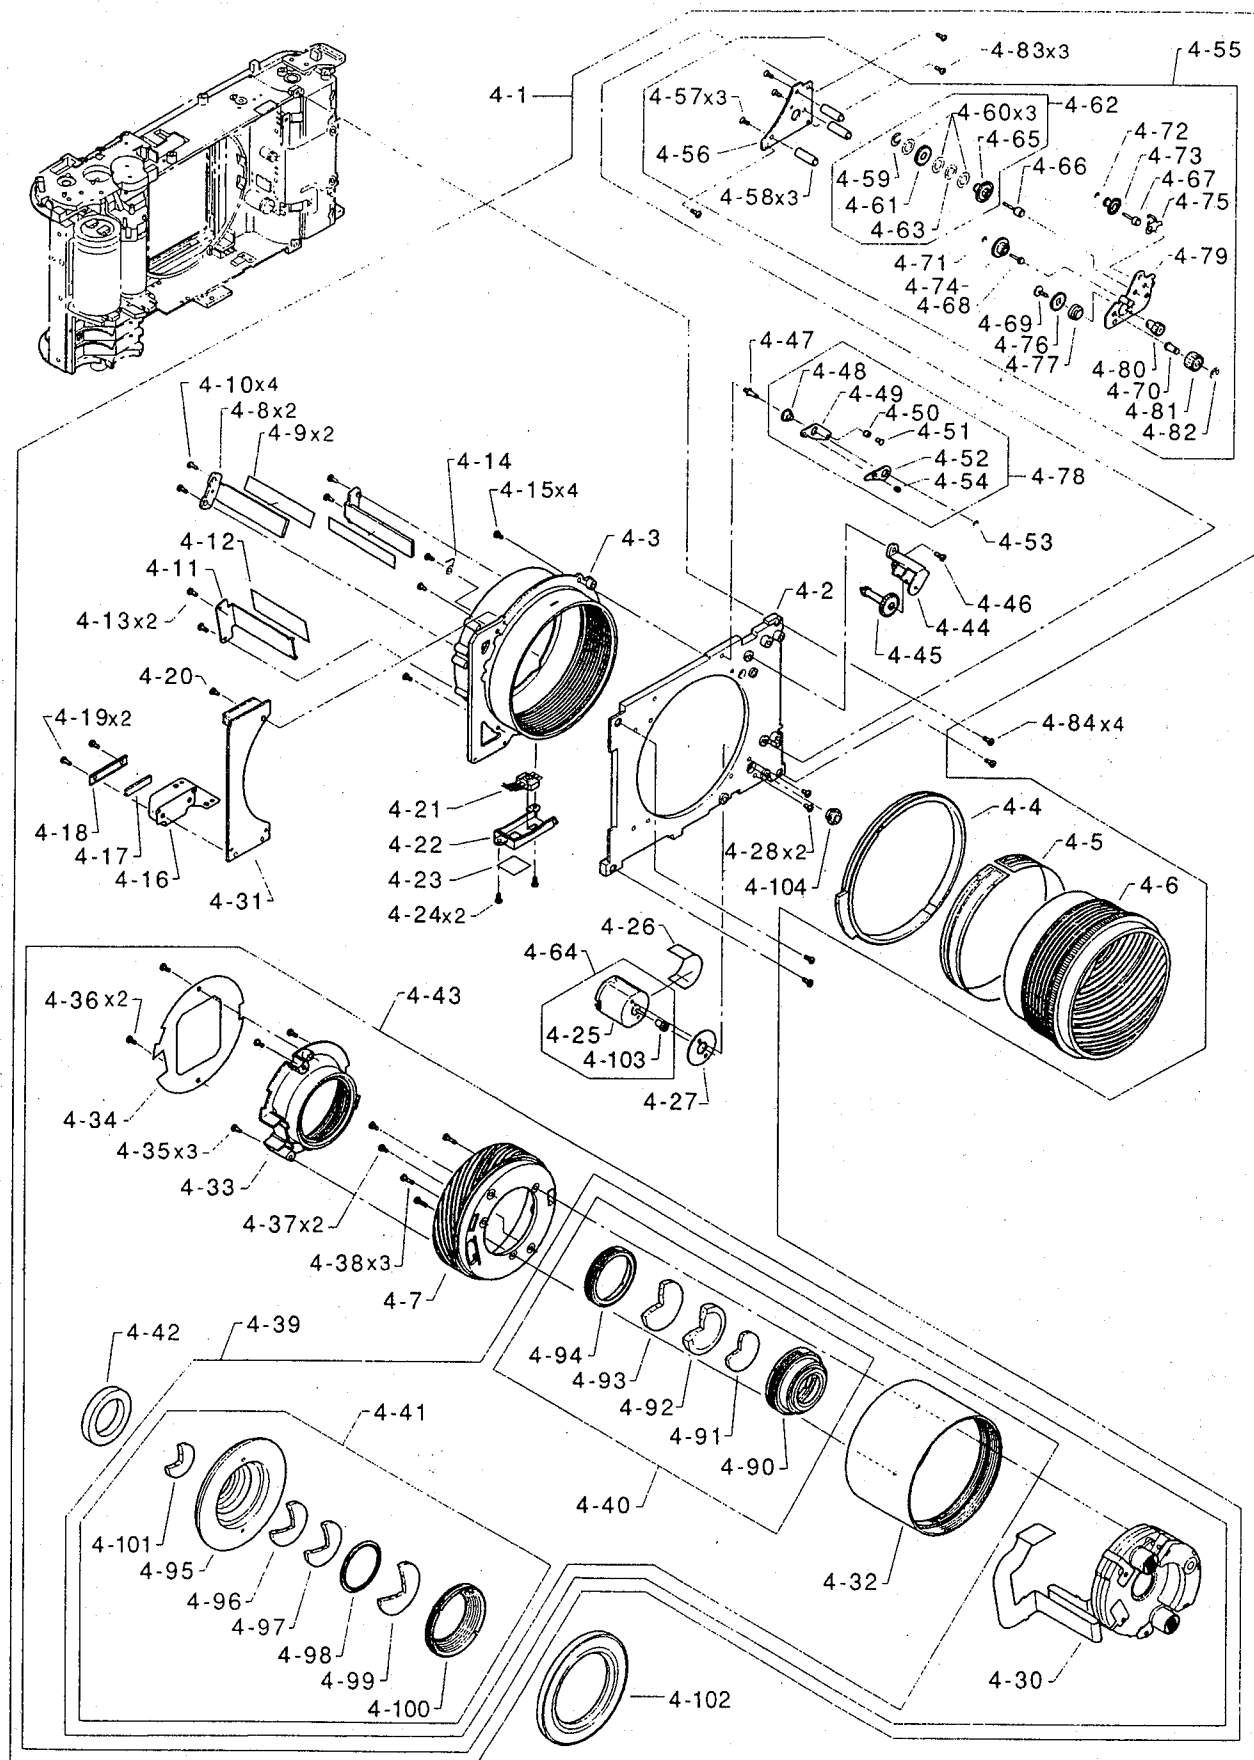

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|--------------------------|------|------------------------|---------|--|
| 4- 1 | 324A 7826310 | Lens assembly | 1 | ○ | | |
| 4- 2 | 10B 7826690 | See-through | 1 | ○ | | |
| 4- 3 | 21B 7826700 | Fixed barrel | 1 | ○ | | |
| 4- 4 | 35B 7826890 | Interlock cam | 1 | ○ | | |
| 4- 5 | 110B 7826880 | Encoder FPCB | 1 | ○ | | |
| 4- 6 | 21B 7826710 | Helicoid barrel | 1 | ○ | | |
| 4- 7 | 21B 7826720 | Moving lens barrel | 1 | ○ | | |
| 4- 8 | 19B 7826750 | Helicoid key | 2 | ○ | | |
| 4- 9 | 19B 7827030 | Light shielding sheet | 2 | ○ | | |
| 4- 10 | 113M 170402M | Screw | 4 | ○ | | |
| 4- 11 | 30B 7826760 | Guide | 1 | ○ | | |
| 4- 12 | 27B 7827040 | Light shielding sheet | 1 | ○ | | |
| 4- 13 | 113M 170402M | Screw | 2 | ○ | | |
| 4- 14 | 111B 385490 | Cord clamp | 1 | ○ | GW690-3 | |
| 4- 15 | 110M 200302M | Screw | 4 | ○ | | |
| 4- 16 | 110B 7830650 | Relay FPCB | 1 | ○ | | |
| 4- 17 | 51B 7826900 | Rubber piece | 1 | ○ | | |
| 4- 18 | 41B 7826910 | Metal fixture | 1 | ○ | | |
| 4- 19 | 113M 170452M | Screw | 2 | ○ | | |
| 4- 20 | 113M 170302M | Screw | 1 | ○ | | |
| 4- 21 | 109B 7826860 | Encoder contact | 1 | ○ | | |
| 4- 22 | 41B 7826870 | Encoder holder | 1 | ○ | | |
| 4- 23 | 27B 7827050 | Light shielding tape | 1 | ○ | | |
| 4- 24 | 113M 170402M | Screw | 2 | ○ | | |
| 4- 25 | 101B 7827400 | Lens driving motor | 1 | × | | |
| 4- 26 | 196B 7822390 | Tape | 1 | ○ | | |
| 4- 27 | 60B 7827070 | Rubber seat | 1 | ○ | | |
| 4- 28 | 110M 160301N | Screw | 2 | ○ | | |
| 4- 30 | 126A 7826410 | Shutter assembly | 1 | ○ | | |
| 4- 31 | 126A 7826420 | Shutter circuit assembly | 1 | ○ | | |
| 4- 32 | 21B 7826820 | Shutter frame | 1 | × | | |
| 4- 33 | 27B 7826730 | Hood | 1 | ○ | | |


Fig. 4

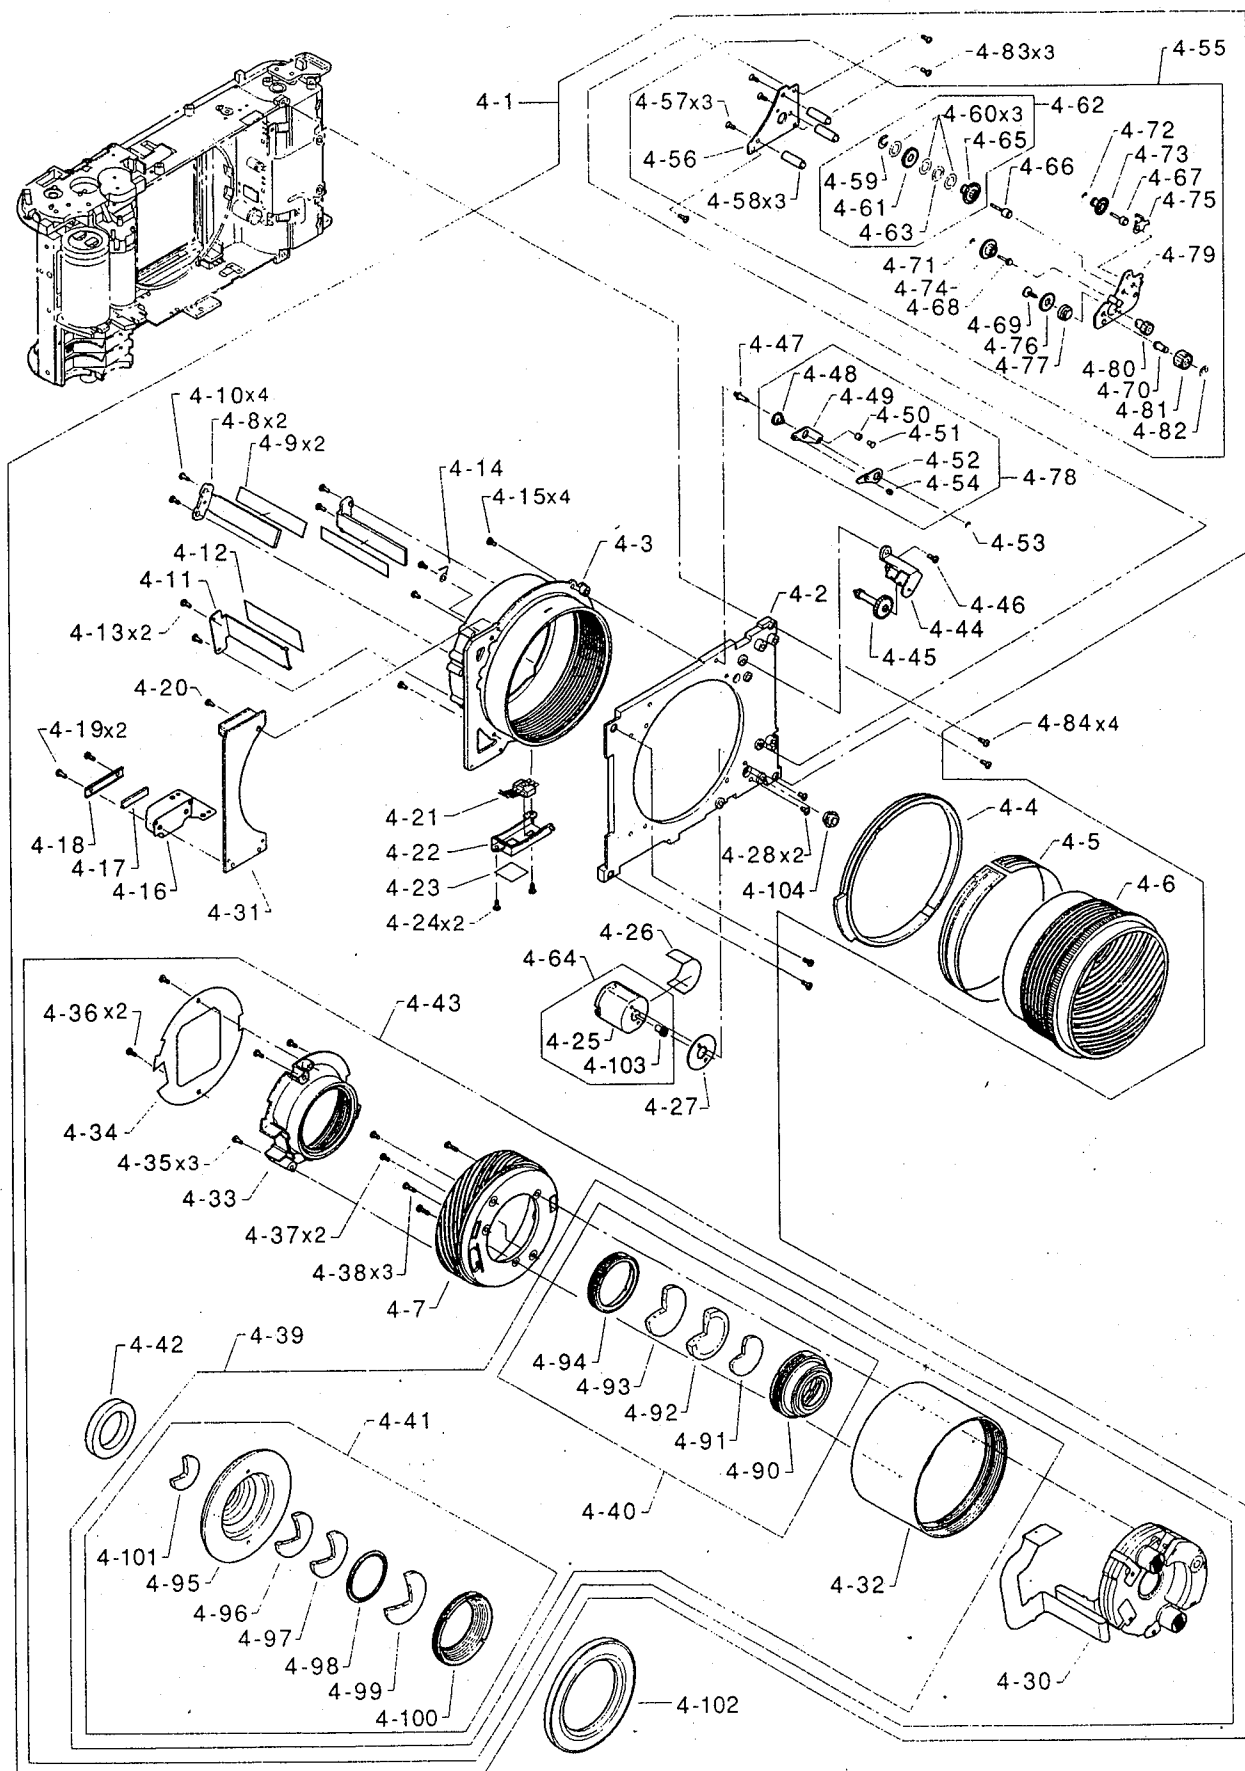

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|-----------------------------|------|------------------------|-------------|---------|
| 4- 34 | 27B 7826740 | Light shielding plate | 1 | ○ | | |
| 4- 35 | 113M 170402M | Screw | 3 | ○ | | |
| 4- 36 | 113M 170402M | Screw | 2 | ○ | | |
| 4- 37 | 110M 170302M | Screw | 2 | ○ | | |
| 4- 38 | 113M 170502M | Screw | 3 | ○ | | |
| 4- 39 | 21A 7826350 | Lens assembly | 1 | ○ | | |
| 4- 40 | 21A 7826340 | Rear lens assembly | 1 | × | | |
| 4- 41 | 21A 7826330 | Front lens assembly | 1 | × | | |
| 4- 42 | 27B 7826840 | Moquette | 1 | ○ | | |
| 4- 43 | 21A 7826320 | Moving lens barrel assembly | 1 | ○ | | |
| 4- 44 | 41B 7826930 | Gear holder | 1 | ○ | | |
| 4- 45 | 34B 7826920 | Interlock gear | 1 | ○ | | |
| 4- 46 | 110M 170401N | Screw | 1 | ○ | | |
| 4- 47 | 32B 7826970 | Shaft | 1 | ○ | | |
| 4- 48 | 31B 7827000 | Bushing | 1 | × | | |
| 4- 49 | 47B 7826940 | Cam lever 1 | 1 | × | | |
| 4- 50 | 30B 7827060 | Roller | 1 | × | | |
| 4- 51 | 17B 7827010 | Pin | 1 | × | | |
| 4- 52 | 47B 7826950 | Cam lever 2 | 1 | × | | |
| 4- 53 | 191M 012T | E-clip | 1 | ○ | | |
| 4- 54 | 88B 7826980 | Eccentric pin | 1 | × | | |
| 4- 55 | 46A 7827310 | Gear train assembly | 1 | ○ | 46A 8521900 | 26/1/98 |
| 4- 56 | 46B 7827490 | Bottom base plate | 1 | ○ | | |
| 4- 57 | 111M 170301N | Screw | 3 | ○ | | |
| 4- 58 | 13B 7827560 | Column | 3 | × | | |
| 4- 59 | 25B 7827600 | C-clip | 1 | × | | |
| 4- 60 | 55B 7827580 | Washer | 3 | × | | |
| 4- 61 | 34B 7827420 | Gear L1 | 1 | × | | |
| 4- 62 | 34A 7827340 | Friction gear assembly | 1 | ○ | | |
| 4- 63 | 55B 7827590 | Friction ring | 1 | × | | |
| 4- 64 | 101A 7826440 | Lens driving motor assembly | 1 | ○ | | |
| 4- 65 | 34B 7827430 | Gear L2-E1 | 1 | × | | |


Fig. 4

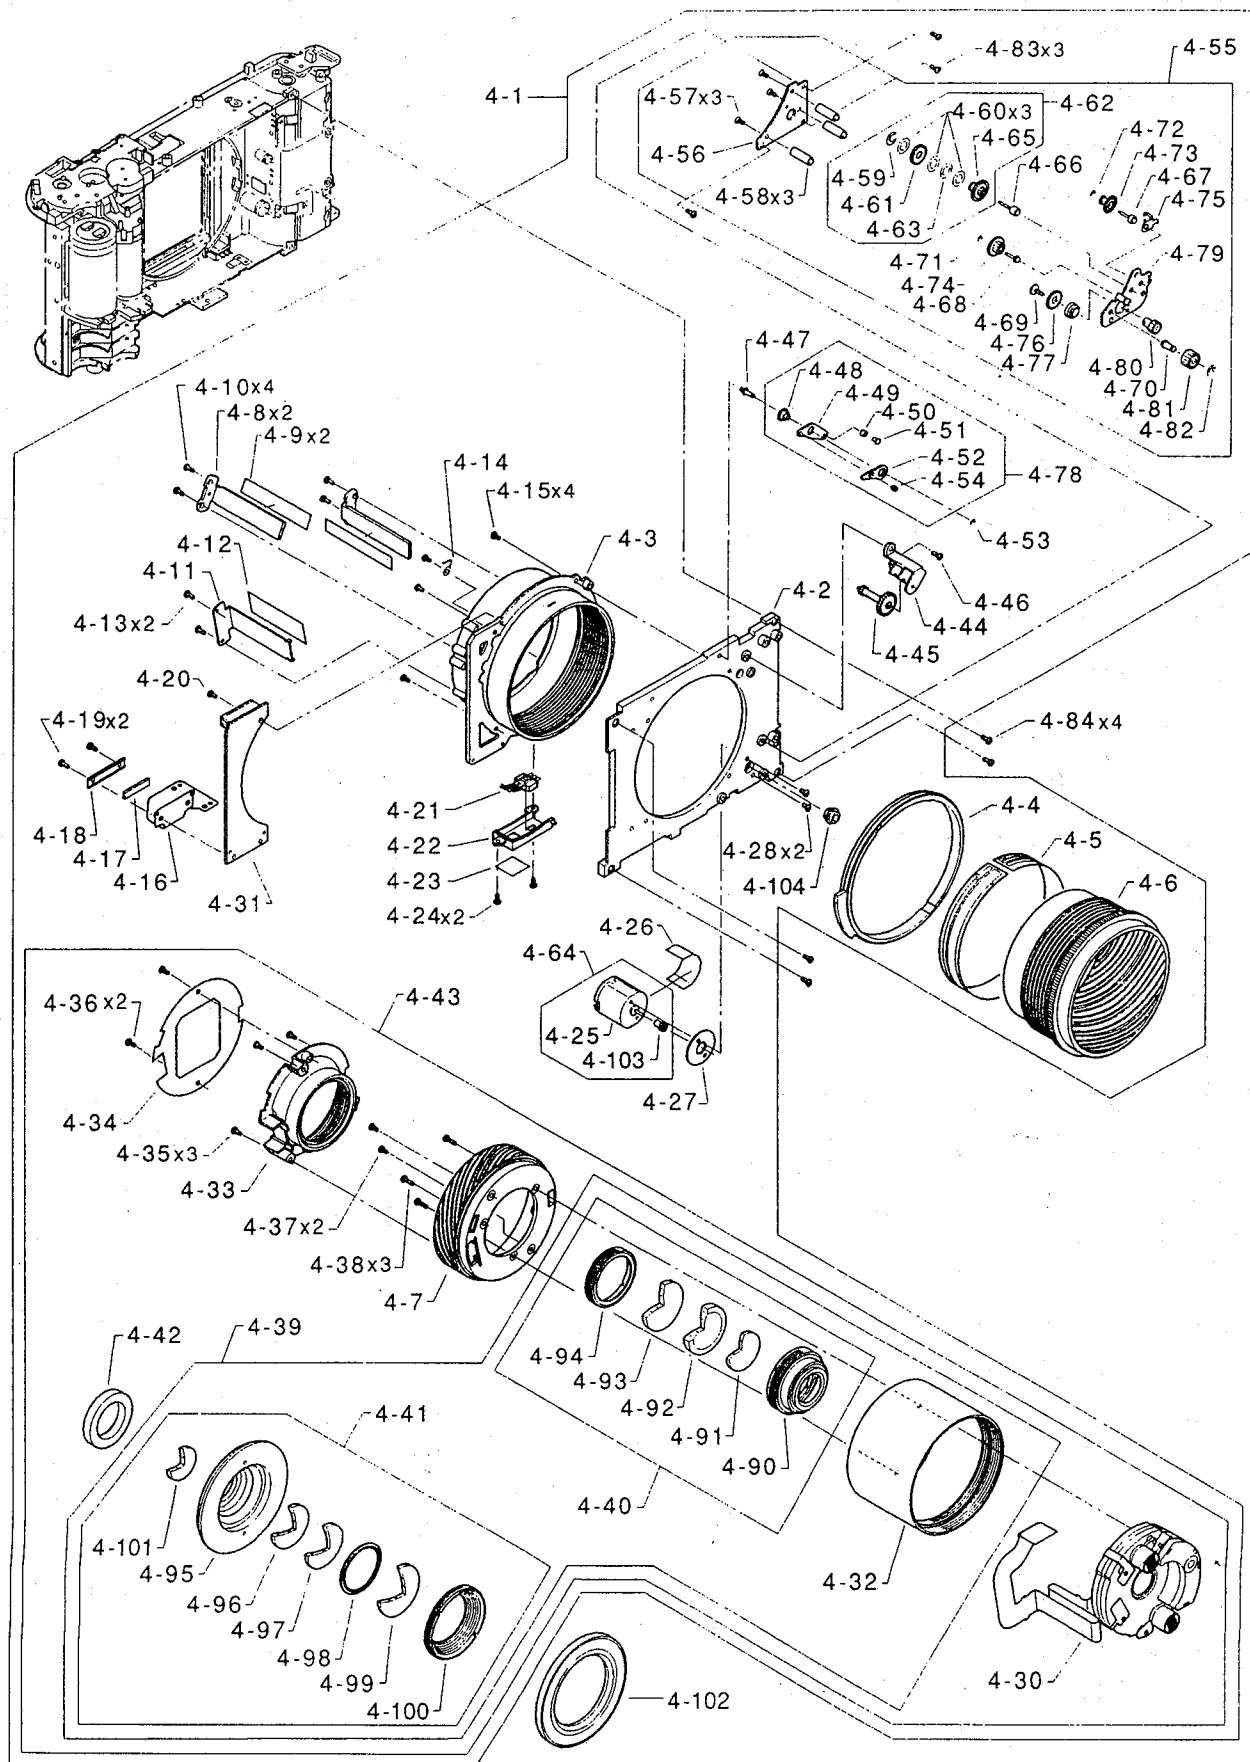

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|--------------------|------|------------------------|-----------|--|
| 4- 66 | 32B 7827520 | Gear shaft | 1 | × | ZOOM 200D | |
| 4- 67 | 32B 7827530 | Shaft | 1 | × | | |
| 4- 68 | 32B 7827540 | Shaft | 1 | × | | |
| 4- 69 | 53B 5115882 | Screw | 1 | ○ | | |
| 4- 70 | 32B 7827550 | Shaft | 1 | × | | |
| 4- 71 | 191M 012T | E-clip | 1 | ○ | | |
| 4- 72 | 191M 008T | E-clip | 1 | ○ | | |
| 4- 73 | 34B 7827450 | Encoder gear | 1 | ○ | | |
| 4- 74 | 34B 7827440 | Gear L3-L4 | 1 | ○ | | |
| 4- 75 | 41B 7827570 | Holder | 1 | × | | |
| 4- 76 | 34B 7827460 | Gear L5 | 1 | ○ | | |
| 4- 77 | 31B 7827510 | Shaft holder | 1 | × | | |
| 4- 78 | 47A 7826430 | Cam lever assembly | 1 | ○ | | |
| 4- 79 | 46B 7827500 | Top base plate | 1 | × | | |
| 4- 80 | 34B 7827470 | Gear L6 | 1 | ○ | | |
| 4- 81 | 34B 7827480 | Gear L7 | 1 | ○ | | |
| 4- 82 | 191M 020T | E-clip | 1 | ○ | | |
| 4- 83 | 110M 170301N | Screw | 3 | ○ | | |
| 4- 84 | 110M 200401M | Screw | 4 | ○ | | |
| 4- 90 | 21B 7826800 | Rear lens frame | 1 | × | | |
| 4- 91 | 1B 7644680 | Lens G5 | 1 | × | | |
| 4- 92 | 1B 7644690 | Lens G6 | 1 | × | | |
| 4- 93 | 1B 7644700 | Lens G7 | 1 | × | | |
| 4- 94 | 23B 7826810 | Holding ring | 1 | × | | |
| 4- 95 | 21B 7826770 | Front lens frame | 1 | × | | |
| 4- 96 | 1B 7644660 | Lens G3 | 1 | × | | |
| 4- 97 | 1B 7644650 | Lens G2 | 1 | × | | |
| 4- 98 | 24B 7826780 | Spacer | 1 | × | | |
| 4- 99 | 1B 7644640 | Lens G1 | 1 | × | | |
| 4-100 | 23B 7826790 | Holding ring | 1 | × | | |
| 4-101 | 1B 7644670 | Lens G4 | 1 | × | | |
| 4-102 | 58B 7826830 | Cover ring | 1 | ○ | | |


Fig. 4

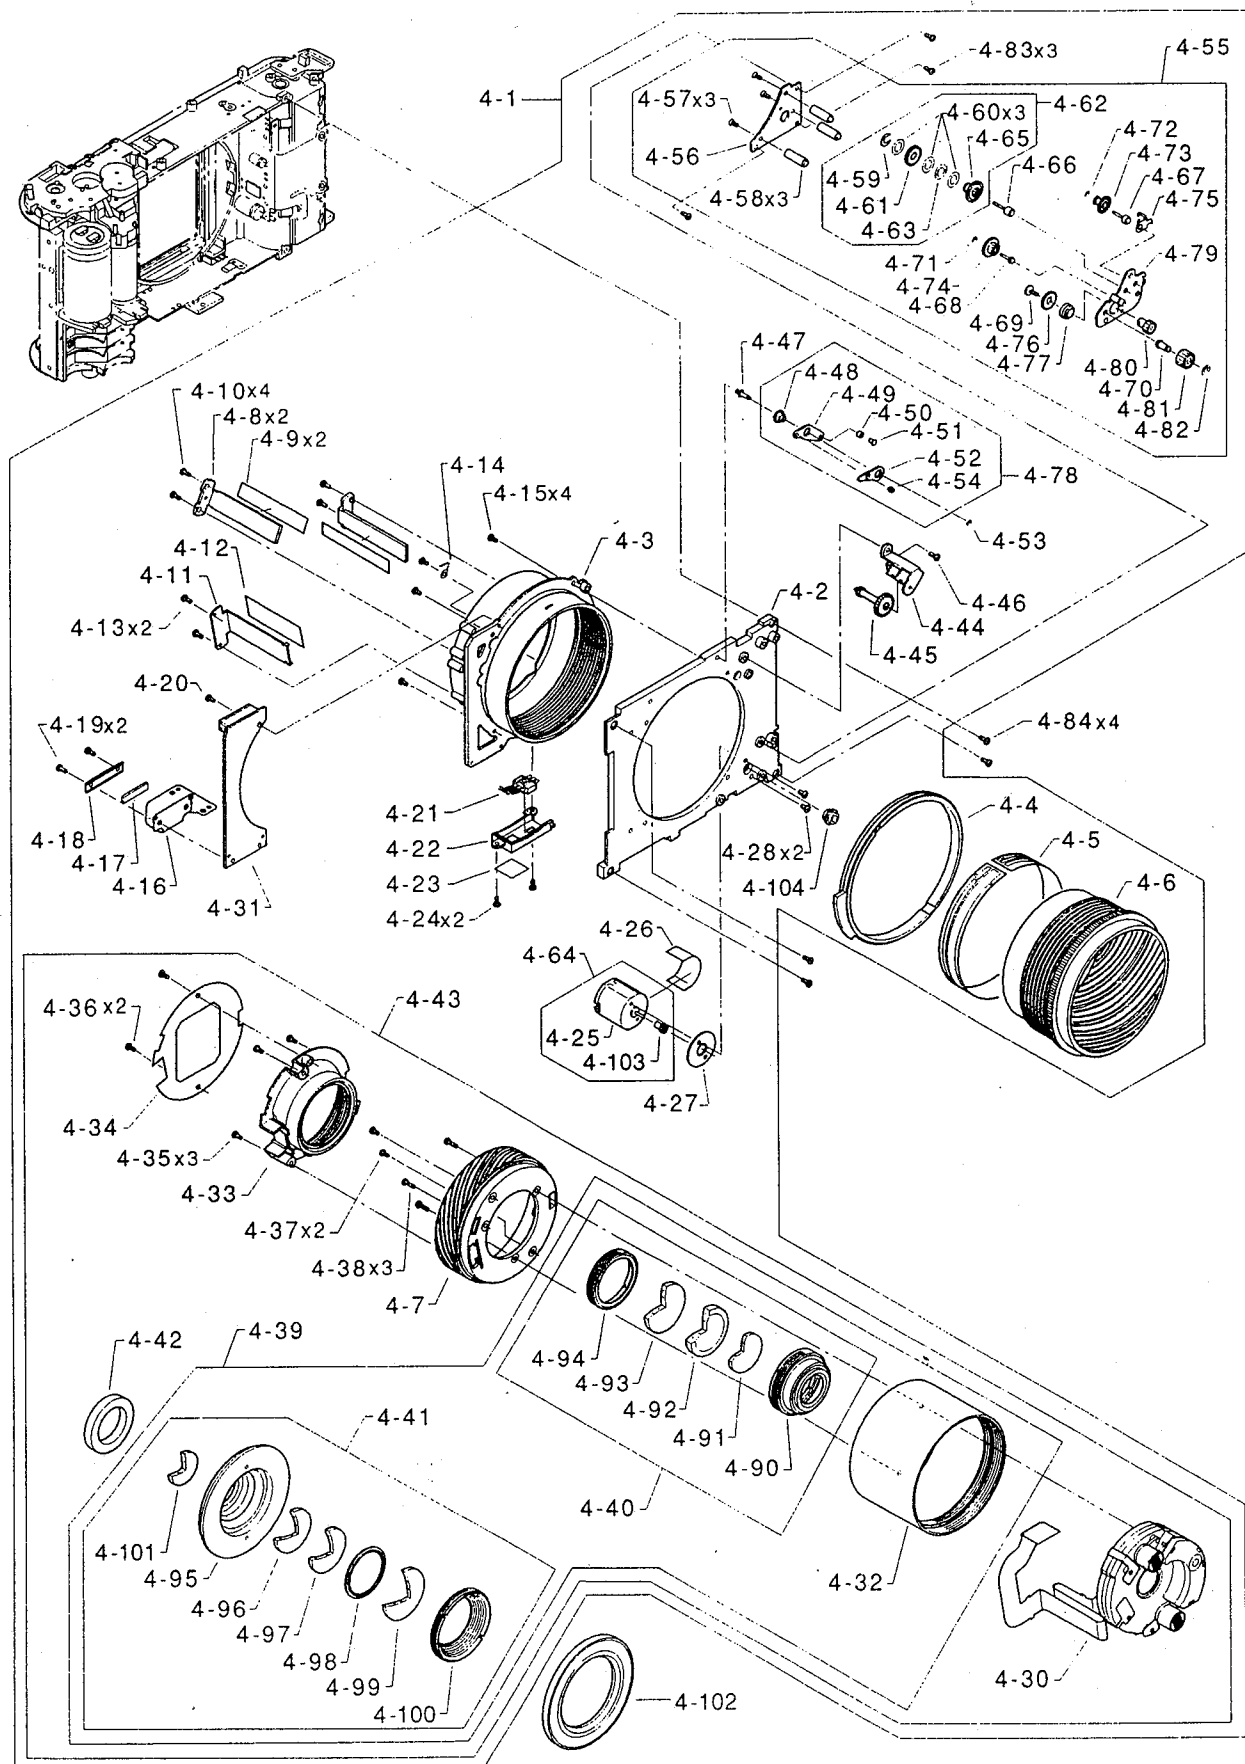

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|-------------|------------|------|------------------------|---------|--|
| 4-103 | 34B 7827410 | Motor gear | 1 | × | | |
| 4-104 | 23B 7827080 | Guide ring | 1 | ○ | | |


Fig. 5

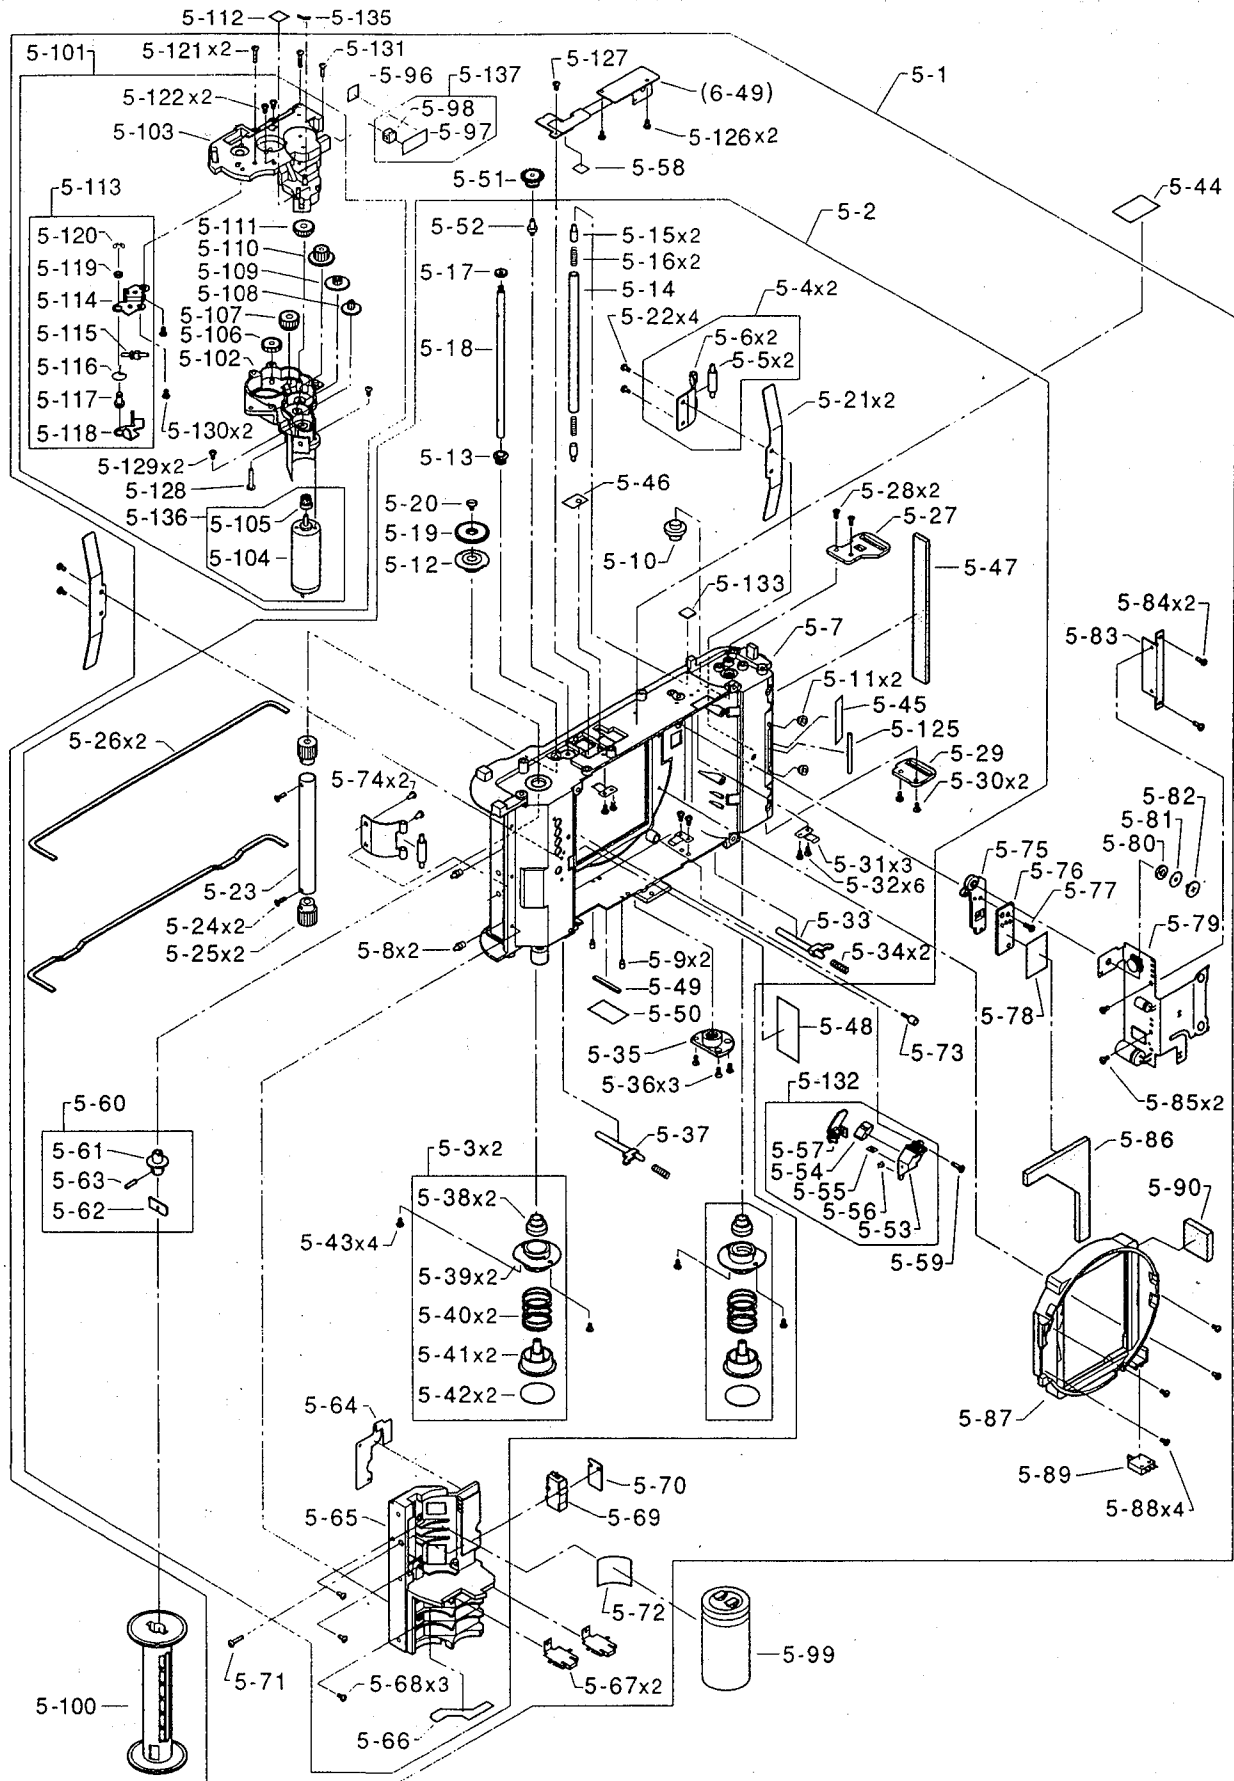

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|--------------------------|------|------------------------|---------|--|
| 5- 1 | 301A 7822860 | Camera body assembly (2) | 1 | ○ | | |
| 5- 2 | 301A 7822810 | Camera body assembly (1) | 1 | ○ | | |
| 5- 3 | 23A 3281080 | Guide ring assembly | 2 | ○ | GS645S | |
| 5- 4 | 50A 7822850 | Leaf spring assembly | 2 | ○ | | |
| 5- 5 | 37B 486980 | Roller | 2 | × | GS645S | |
| 5- 6 | 50B 3281203 | Leaf spring | 2 | × | GS645S | |
| 5- 7 | 10B 7823050 | Camera chassis | 1 | × | | |
| 5- 8 | 17B 7823320 | Lock pin | 2 | × | | |
| 5- 9 | 17B 7823170 | Guide pin | 2 | × | | |
| 5- 10 | 31B 486832 | Spool shaft | 1 | × | GS645S | |
| 5- 11 | 17B 7823180 | Guide shaft | 2 | × | | |
| 5- 12 | 31B 7823150 | Shaft holder | 1 | ○ | | |
| 5- 13 | 31B 3281373 | Shaft holder | 1 | ○ | GS645S | |
| 5- 14 | 30B 7823350 | Roller | 1 | ○ | GS645S | |
| 5- 15 | 17B 30165 | Pin | 2 | ○ | GS645S | |
| 5- 16 | 50B 30172 | Spring | 2 | ○ | GS645S | |
| 5- 17 | 34B 3281391 | Gear | 1 | ○ | GS645S | |
| 5- 18 | 32B 3281384 | Shaft | 1 | ○ | GS645S | |
| 5- 19 | 34B 7823160 | Film take-up gear | 1 | ○ | | |
| 5- 20 | 53B 30721 | Screw | 1 | ○ | GW690-3 | |
| 5- 21 | 50B 486961 | Leaf spring | 2 | ○ | GW690-3 | |
| 5- 22 | 110M 140151N | Screw | 4 | ○ | | |
| 5- 23 | 36B 3281414 | Counter drum | 1 | ○ | GS645S | |
| 5- 24 | 111M 140401M | Screw | 2 | ○ | | |
| 5- 25 | 36B 3281404 | Counter roller | 2 | ○ | GS645S | |
| 5- 26 | 27B 7823280 | Moquette | 2 | ○ | | |
| 5- 27 | 41B 7823070 | Strap lug (top) | 1 | ○ | | |
| 5- 28 | 111M 200453M | Screw | 2 | ○ | | |
| 5- 29 | 41B 7823080 | Strap lug (bottom) | 1 | ○ | | |
| 5- 30 | 110M 200402M | Screw | 2 | ○ | | |
| 5- 31 | 85B 7823240 | Cord clamp | 3 | ○ | | |
| 5- 32 | 110M 140151N | Screw | 6 | ○ | | |


Fig. 5

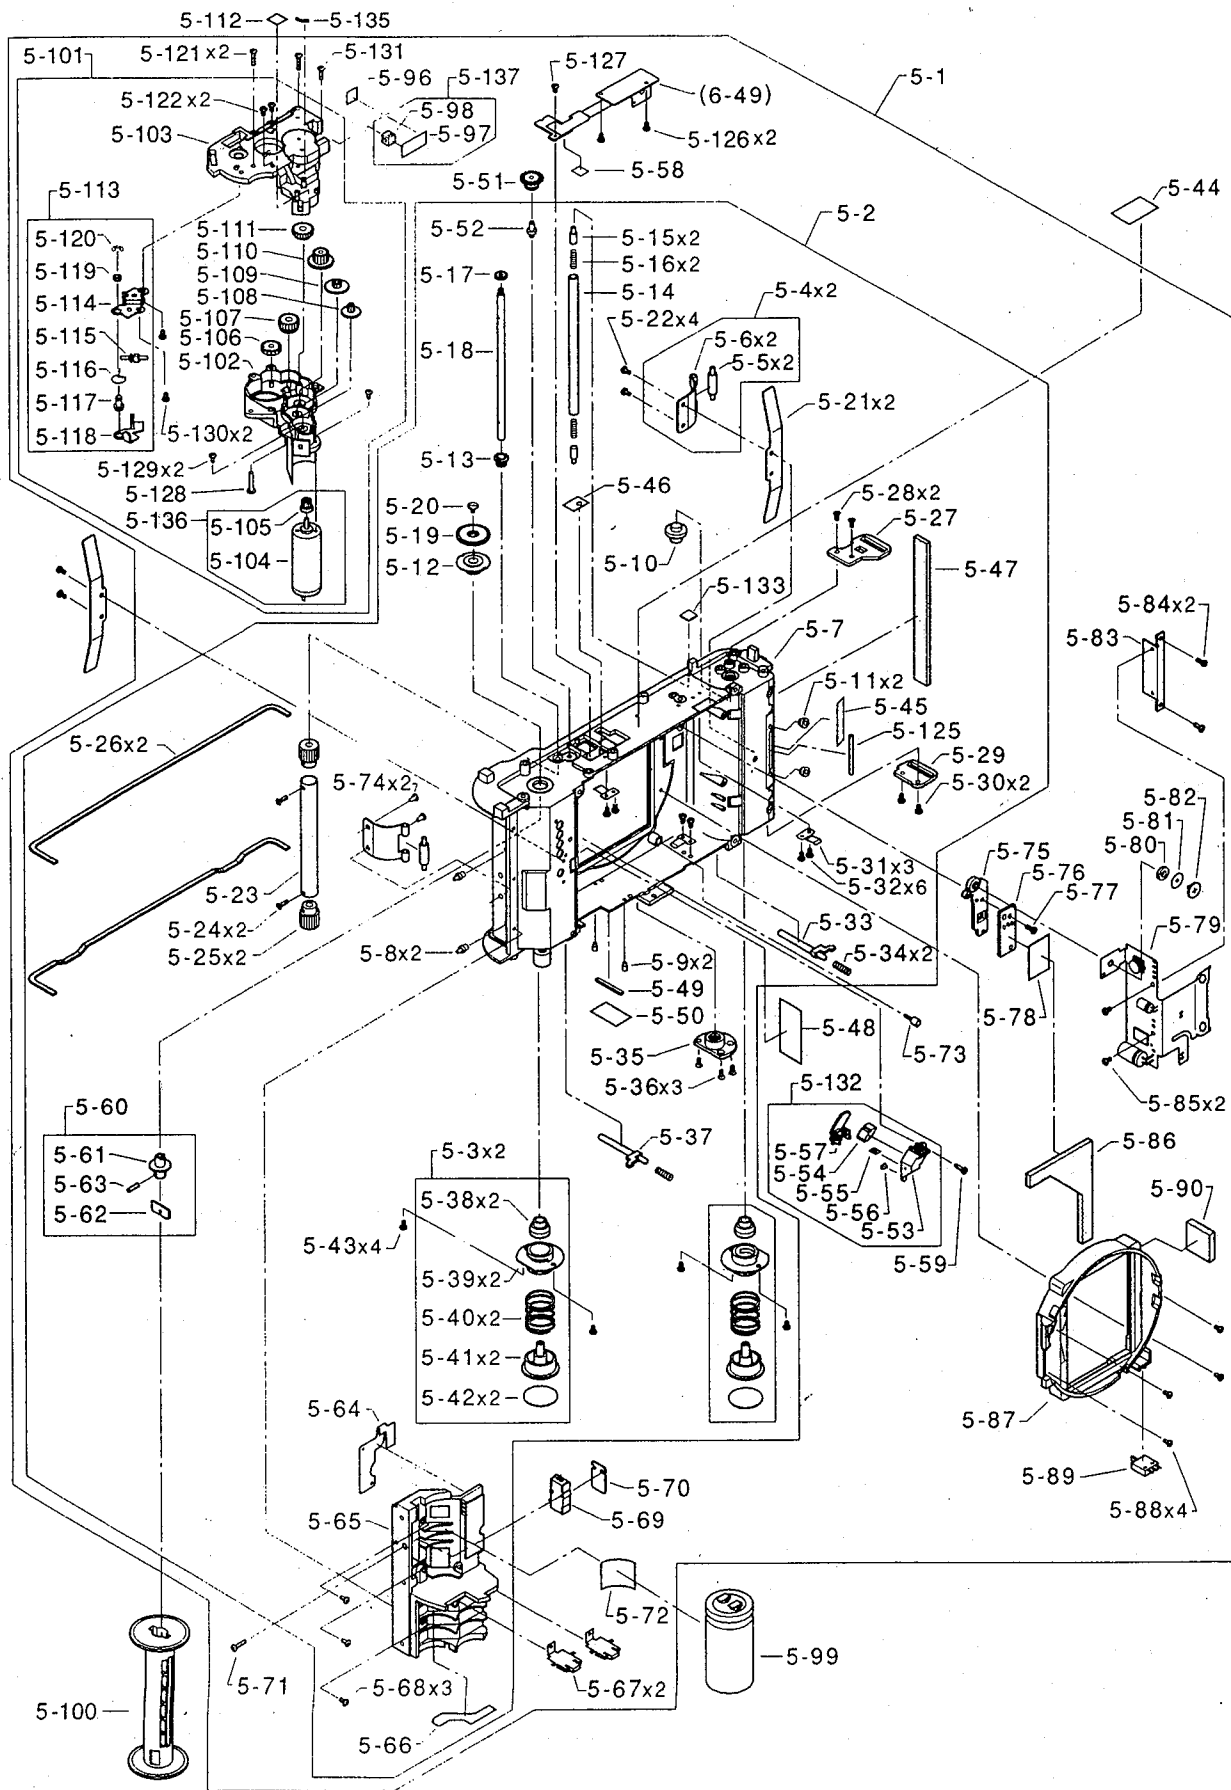

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks |
|---------|--------------|------------------------|------|------------------------|---------|
| 5- 33 | 82B 3281153 | Release bar | 1 | ○ | GS645S |
| 5- 34 | 50B 3281181 | Spring | 2 | ○ | GS645S |
| 5- 35 | 53B 93826 | Tripod socket | 1 | ○ | GS645S |
| 5- 36 | 111M 200453M | Screw | 3 | ○ | |
| 5- 37 | 82B 3281161 | Release bar | 1 | ○ | GS645S |
| 5- 38 | 32B 3281142 | Spool shaft holder | 2 | × | |
| 5- 39 | 23B 3281122 | Guide ring | 2 | × | GS645S |
| 5- 40 | 50B 3281171 | Spring | 2 | × | GS645S |
| 5- 41 | 16B 3281135 | Knob | 2 | × | GS645S |
| 5- 42 | 11B 3280740 | Tape | 1 | ○ | GS645S |
| 5- 43 | 110M 200301M | Screw | 4 | ○ | |
| 5- 44 | 187B 7828610 | Adhesive tape | 1 | ○ | |
| 5- 45 | 58B 7823270 | Insulator | 1 | ○ | |
| 5- 46 | 58B 7823250 | Insulator | 1 | ○ | |
| 5- 47 | 27B 7823300 | Moquette | 1 | ○ | |
| 5- 48 | 196B 7822390 | Tape | 1 | ○ | |
| 5- 49 | 51B 7822420 | Metal fixture | 1 | ○ | |
| 5- 50 | 58B 7823260 | Insulator | 1 | ○ | |
| 5- 51 | 34B 7823630 | Encoder gear | 1 | ○ | |
| 5- 52 | 32B 7823640 | Encoder shaft | 1 | ○ | |
| 5- 53 | 12B 7813940 | Prism frame | 1 | × | |
| 5- 54 | 2B 7831900 | Prism | 1 | × | |
| 5- 55 | 26B 7831960 | Diaphragm | 1 | × | |
| 5- 56 | 2B 7831910 | Lens | 1 | × | |
| 5- 57 | 11B 7831950 | Cover | 1 | × | |
| 5- 58 | 27B 7831970 | Mask | 1 | ○ | |
| 5- 59 | 110M 140402M | Screw | 1 | ○ | |
| 5- 60 | 34A 720041 | Take-up shaft assembly | 1 | ○ | GW690-3 |
| 5- 61 | 32B 486844 | Take-up shaft | 1 | × | GW690-3 |
| 5- 62 | 85B 30041 | Take-up claw | 1 | × | GW690-3 |
| 5- 63 | 182M 120401M | Spring pin | 1 | × | GW690-3 |
| 5- 64 | 110B 7830670 | DX FPCB | 1 | ○ | |


Fig. 5

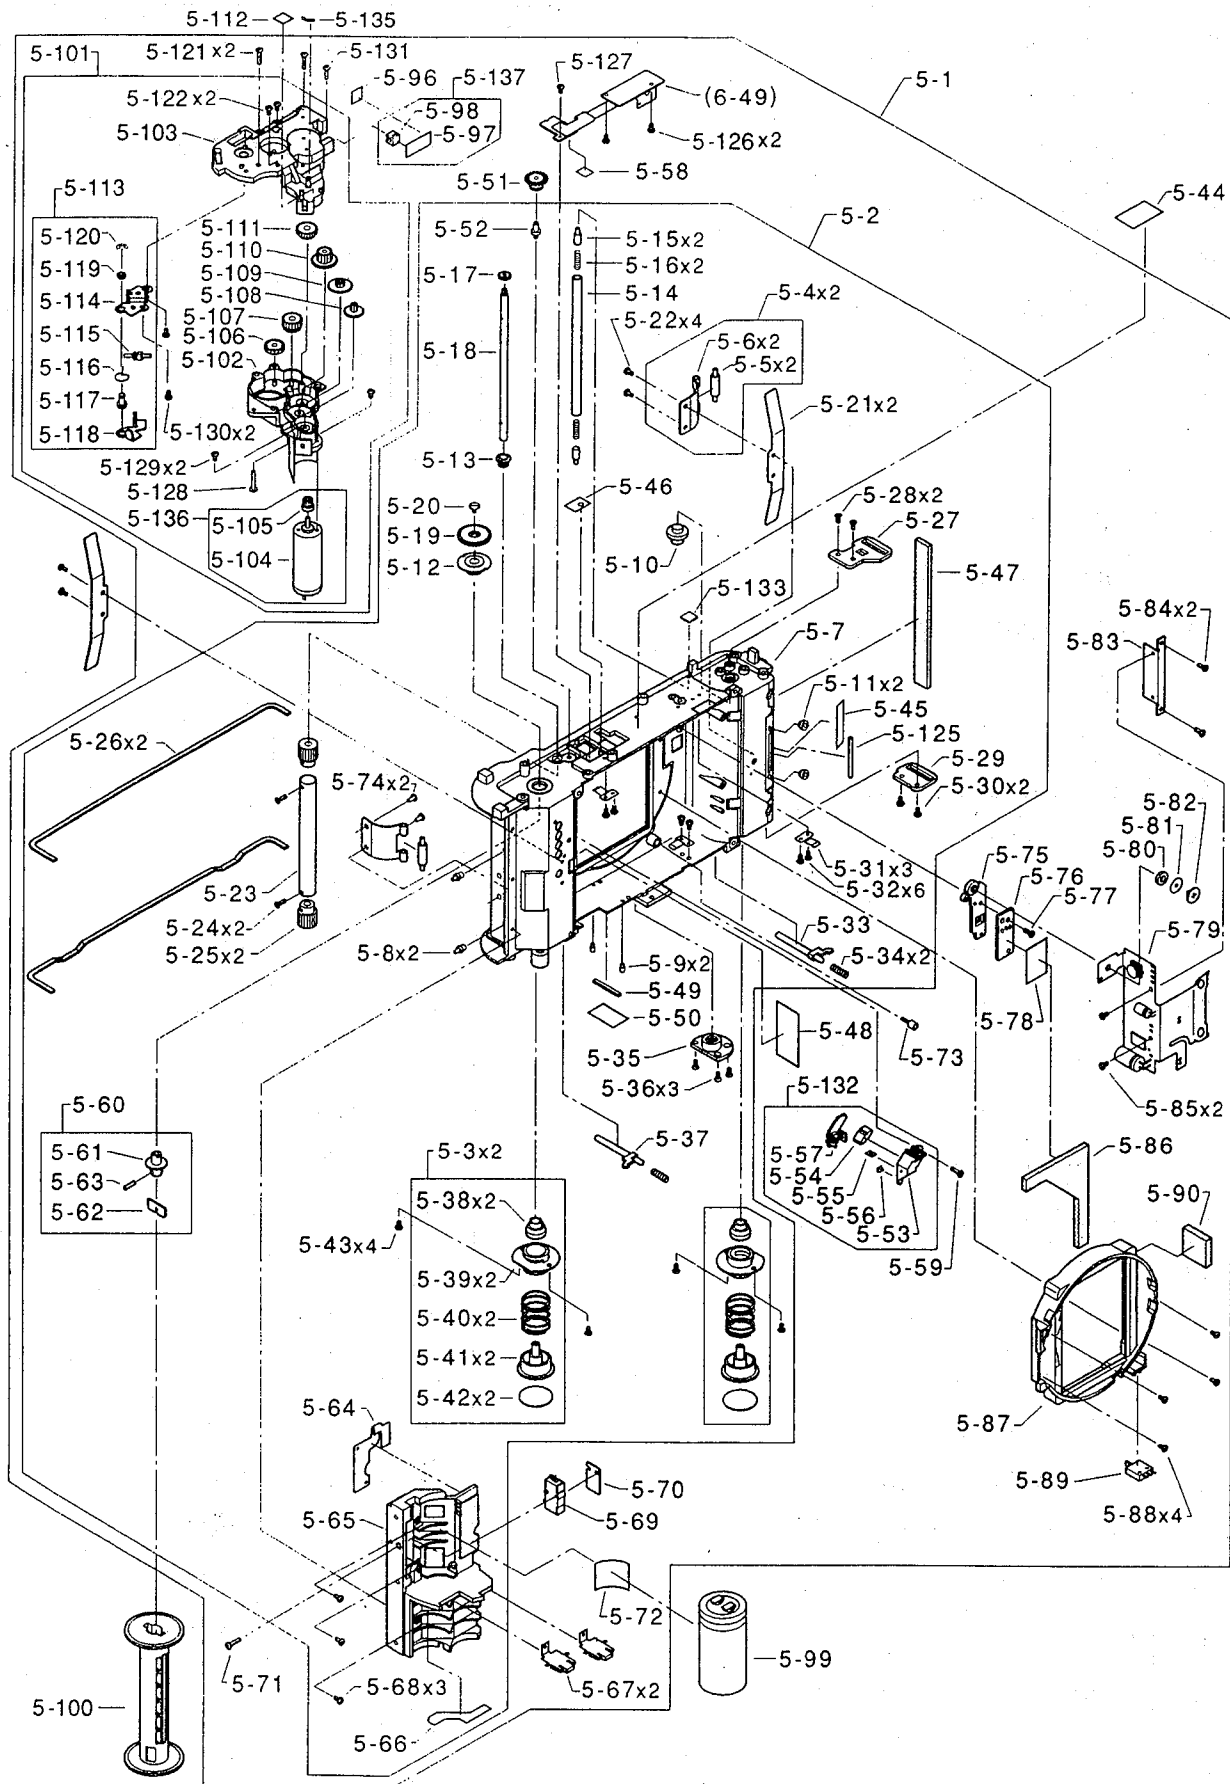

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|--------------------------------------|------|------------------------|----------|--|
| 5- 65 | 10B 7823090 | Battery compartment base | 1 | ○ | | |
| 5- 66 | 58B 7823330 | Battery label | 1 | ○ | | |
| 5- 67 | 109B 7283100 | Battery contact | 2 | ○ | | |
| 5- 68 | 110M 170402M | Screw | 3 | ○ | | |
| 5- 69 | 121K 999270 | SB switch | 1 | ○ | | |
| 5- 70 | 41B 7823120 | Holder | 1 | ○ | | |
| 5- 71 | 110M 170652M | Screw | 1 | ○ | | |
| 5- 72 | 187B 7823340 | Adhesive tape | 1 | ○ | | |
| 5- 73 | 17B 7823190 | Pin | 1 | ○ | | |
| 5- 74 | 170M 15014B | Rivet | 2 | × | | |
| 5- 75 | 12B 7823130 | Holder | 1 | ○ | | |
| 5- 76 | 110A 7829950 | PR PCB assembly | 1 | ○ | | |
| 5- 77 | 110M 170352M | Screw | 1 | ○ | | |
| 5- 78 | 27B 7829510 | Light shielding tape | 1 | ○ | | |
| 5- 79 | 110A 7829910 | Battery FPCB assembly | 1 | ○ | | |
| 5- 80 | 51B 7051950 | Rubber ring | 1 | ○ | ELITE OP | |
| 5- 81 | 55B 7052100 | Washer | 1 | ○ | ELITE OP | |
| 5- 82 | 53B 7052130 | Set screw | 1 | ○ | ELITE OP | |
| 5- 83 | 41B 7822480 | Bracket | 1 | ○ | | |
| 5- 84 | 110M 170401N | Screw | 2 | ○ | | |
| 5- 85 | 110M 140251N | Screw | 2 | ○ | | |
| 5- 86 | 27B 7823310 | Moquette | 1 | ○ | | |
| 5- 87 | 27B 7823060 | Hood | 1 | ○ | | |
| 5- 88 | 110M 140352M | Screw | 4 | ○ | | |
| 5- 89 | 121K 9992900 | SZ switch | 1 | ○ | | |
| 5- 90 | 27B 7823360 | Moquette | 1 | ○ | | |
| 5- 96 | 187B 7830860 | Adhesive tape | 1 | ○ | | |
| 5- 97 | 110B 7830860 | PI PCB | 1 | × | | |
| 5- 98 | 106K 998920 | PI | 1 | × | | |
| 5- 99 | 116B 7831760 | Main capacitor | 1 | ○ | | |
| 5-100 | 37B 29490 | Spool | 1 | ○ | GW690-3 | |
| 5-101 | 46A 7823810 | Film transporting mechanism assembly | 1 | ○ | | |


Fig. 5

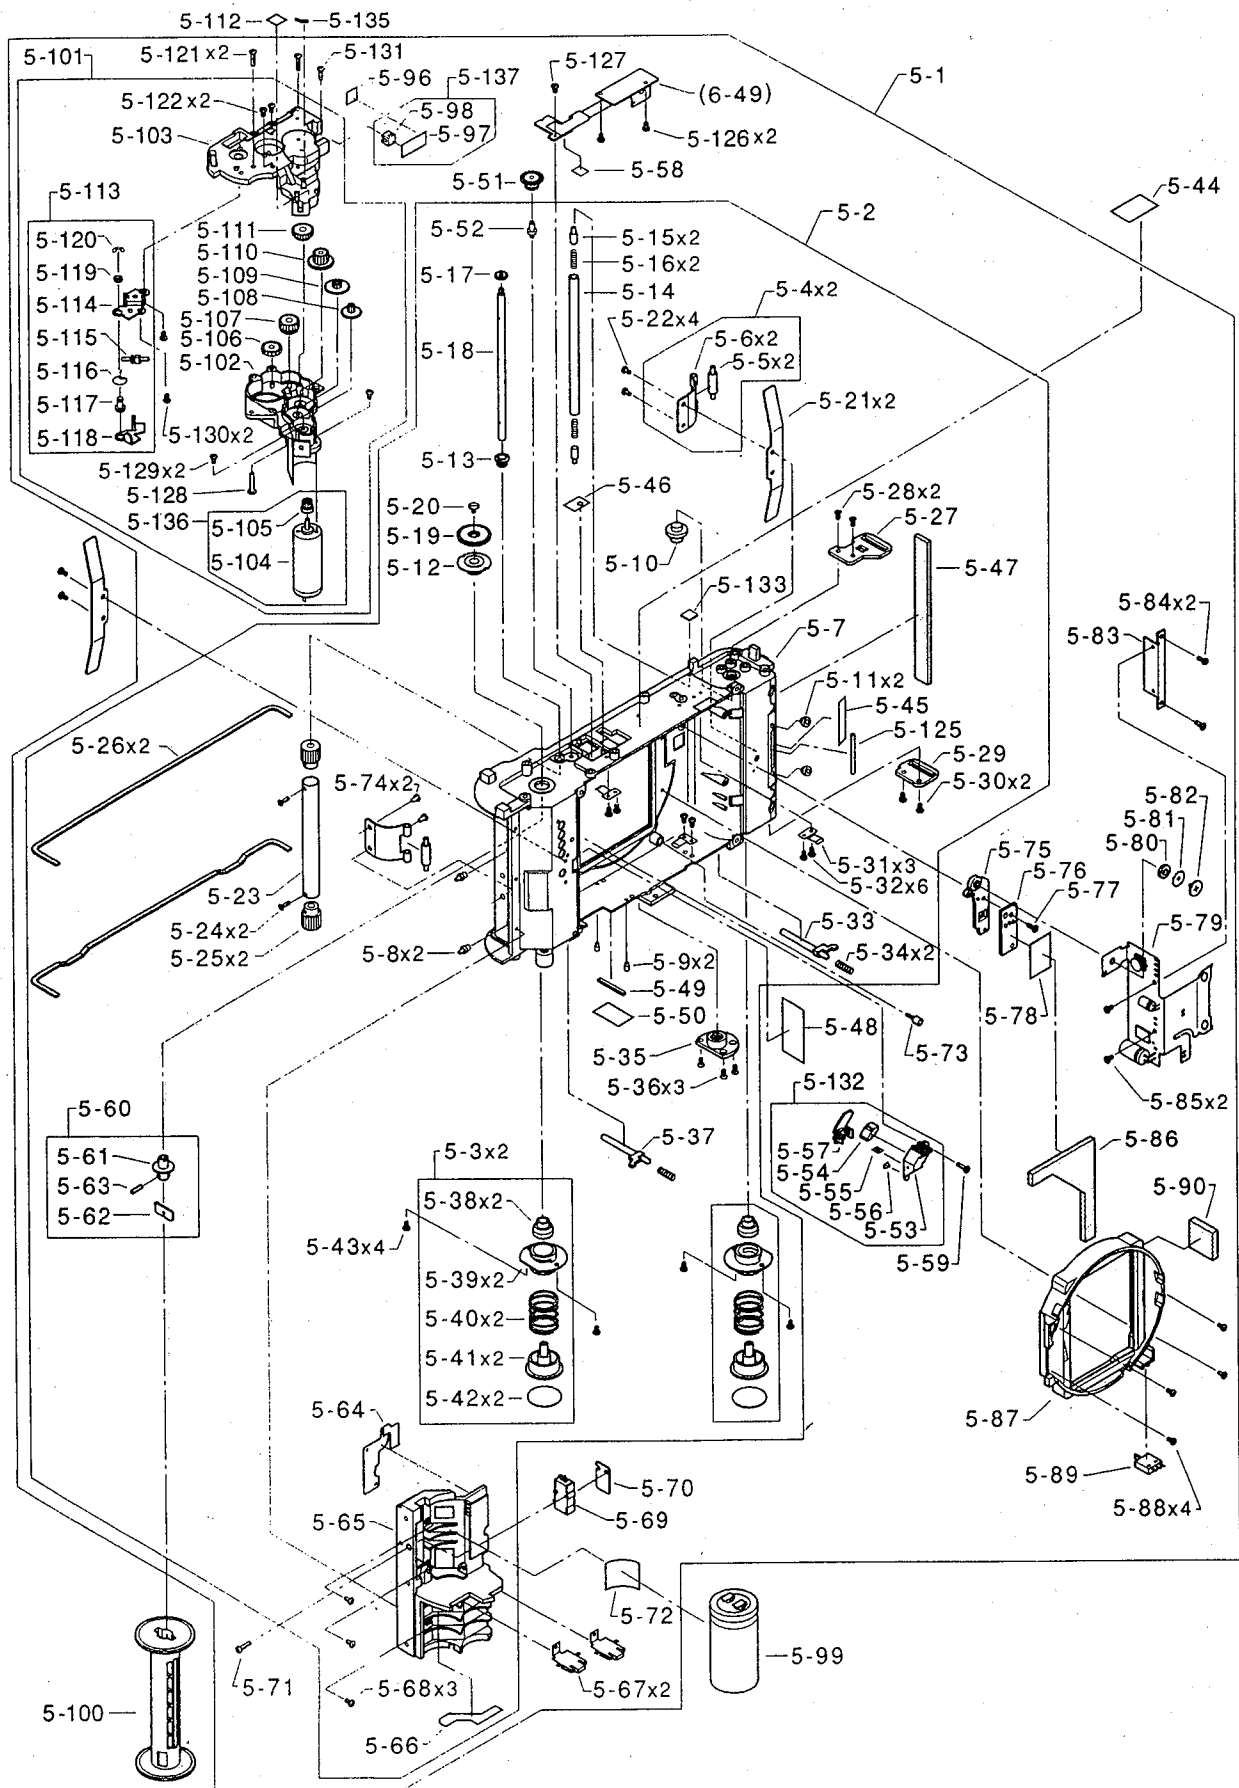

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|-------------------------|------|------------------------|------------|--|
| 5-102 | 46B 7823960 | Bottom base plate | 1 | × | | |
| 5-103 | 46B 7823970 | Top base plate | 1 | ○ | | |
| 5-104 | 101K 912270 | Film transporting motor | 1 | × | MULTI 800D | |
| 5-105 | 34B 6910120 | Motor gear | 1 | × | MULTI 800D | |
| 5-106 | 34B 7823990 | Gear G6 | 1 | ○ | | |
| 5-107 | 34B 6910111 | Double step gear | 1 | ○ | MULTI 800D | |
| 5-108 | 34B 7828940 | Gear G1 | 1 | ○ | MULTI 800D | |
| 5-109 | 34B 6916930 | Gear 2 | 1 | ○ | MULTI 800D | |
| 5-110 | 34B 7823980 | Gear | 1 | ○ | | |
| 5-111 | 34B 6491400 | Gear G2 | 1 | ○ | MULTI 800D | |
| 5-112 | 187B 7058510 | Adhesive tape | 1 | ○ | ELITE OP | |
| 5-113 | 46A 7823550 | Release lever assembly | 1 | ○ | | |
| 5-114 | 46B 7824040 | Base plate | 1 | × | | |
| 5-115 | 17B 7824080 | Release pin | 1 | × | | |
| 5-116 | 50B 7824130 | Spring | 1 | × | | |
| 5-117 | 32B 7824070 | Release shaft | 1 | × | | |
| 5-118 | 47B 7824060 | Release lever | 1 | × | | |
| 5-119 | 31B 7824050 | Bushing | 1 | × | | |
| 5-120 | 191M 015T | E-clip | 1 | ○ | | |
| 5-121 | 110M 170702M | Screw | 2 | ○ | | |
| 5-122 | 113M 170452N | Screw | 2 | ○ | | |
| 5-125 | 51B 7822440 | Rubber seal | 1 | ○ | | |
| 5-126 | 110M 140221M | Screw | 2 | ○ | | |
| 5-127 | 110M 140221M | Screw | 1 | ○ | | |
| 5-128 | 32B 7824140 | Shaft | 1 | × | | |
| 5-129 | 110M 160301M | Screw | 2 | ○ | ELITE OP | |
| 5-130 | 113M 200351M | Screw | 2 | ○ | | |
| 5-131 | 110M 170402M | Screw | 1 | ○ | | |
| 5-132 | 324A 7831880 | Data lens assembly | 1 | ○ | | |
| 5-133 | 27B 6768490 | Light shielder | 1 | ○ | GS645S | |
| 5-134 | 111M 170201M | Screw | 4 | ○ | | |
| 5-135 | 108B 7822630 | Grounding terminal | 1 | ○ | | |


Fig. 5

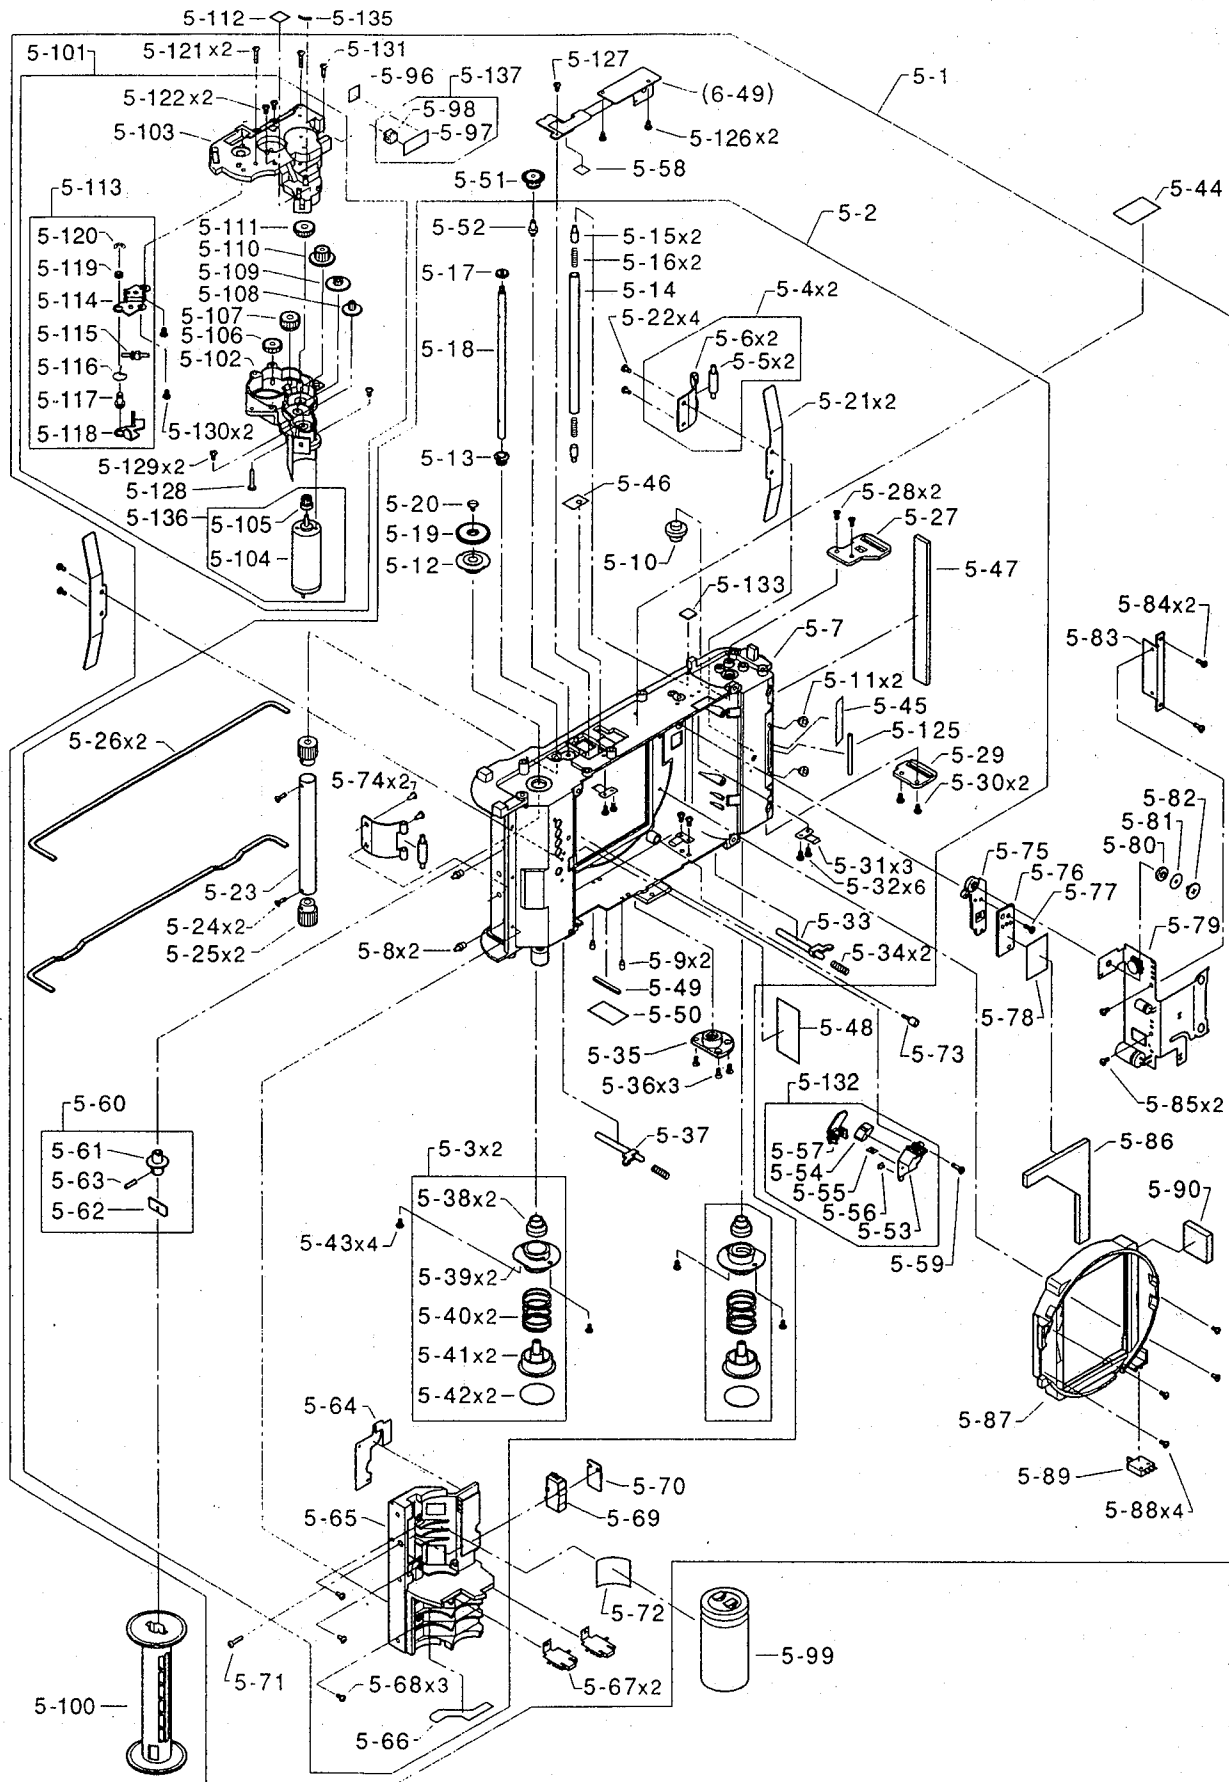

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|----------------------------------|------|------------------------|---------|--|
| 5-136 | 101A 7823830 | Film transporting motor assembly | 1 | <input type="radio"/> | | |
| 5-137 | 110A 7830460 | PI PCB assembly | 1 | <input type="radio"/> | | |

Fig. 6

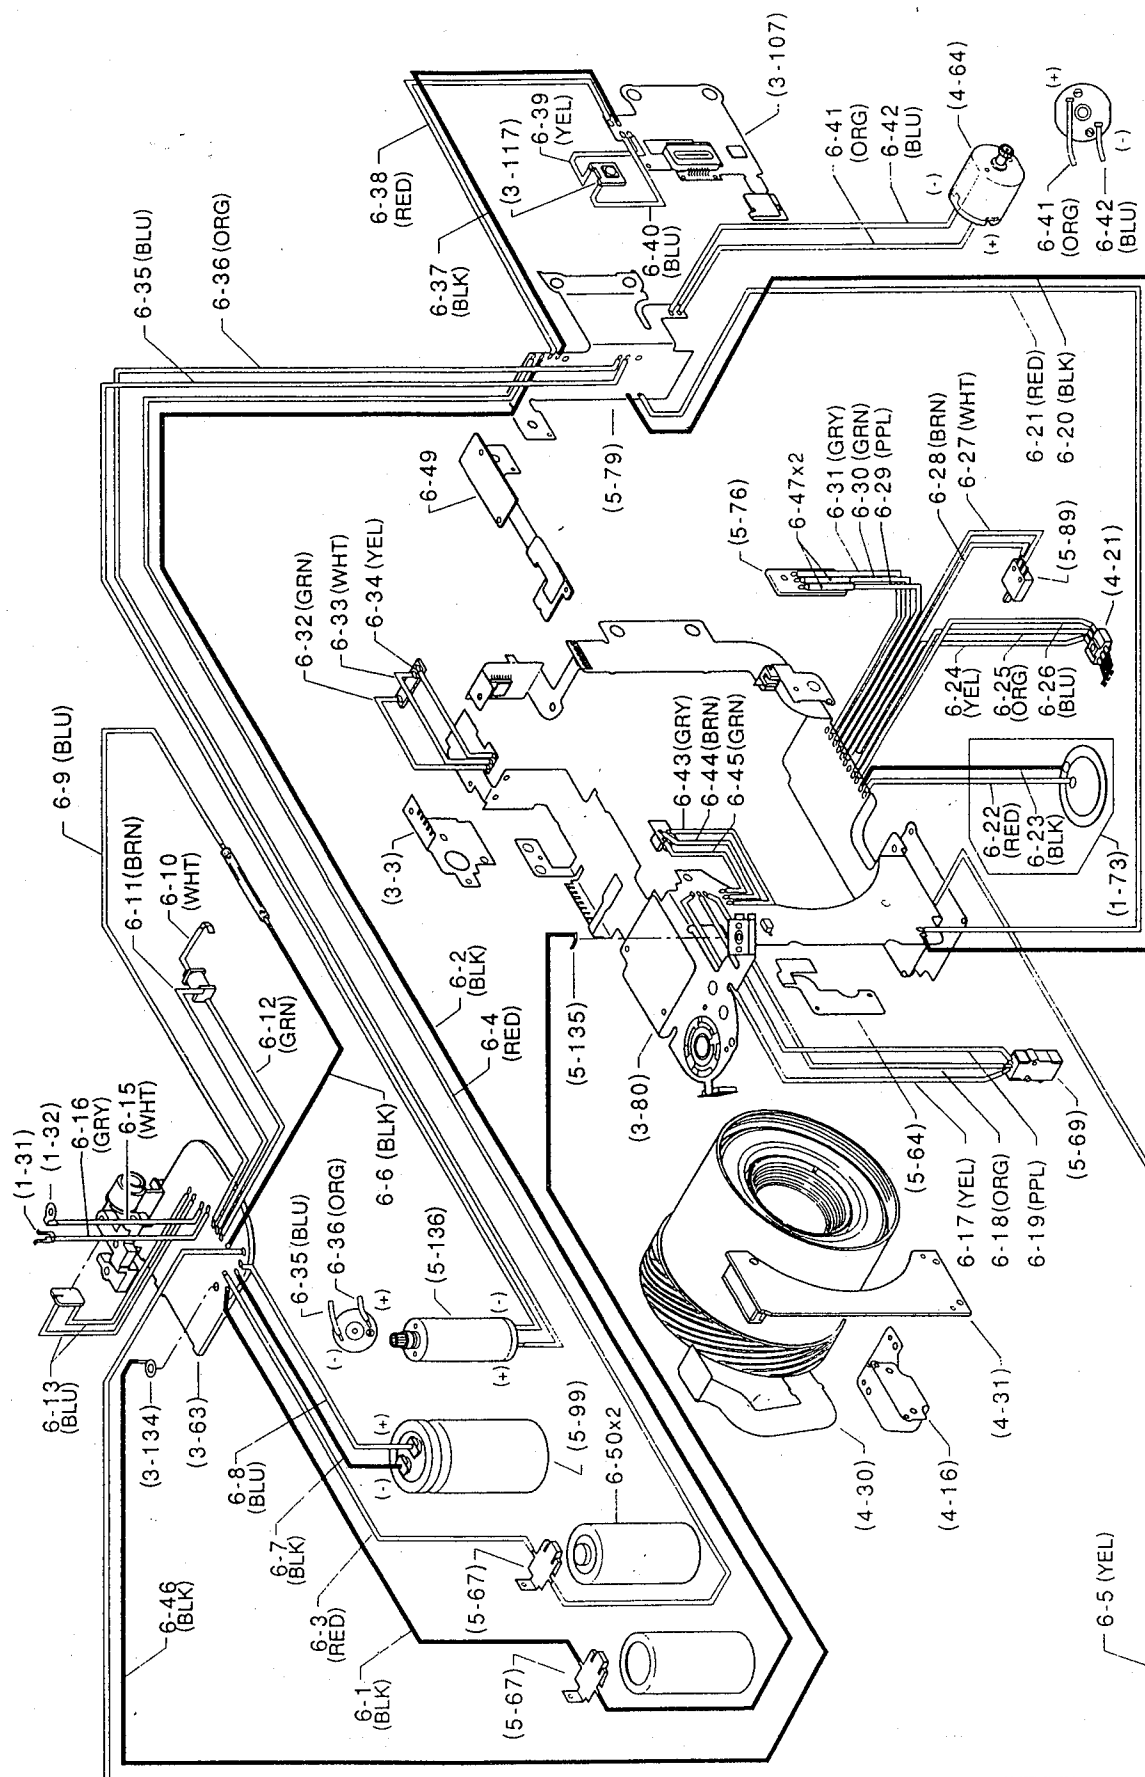

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|-------------------------------|------|------------------------|------------------|--|
| 6- 1 | 111B 7831100 | Lead wire (Flash (-)) Black | 1 | ○ | | |
| 6- 2 | 111B 7831080 | Lead wire (Battery (-)) Black | 1 | ○ | | |
| 6- 3 | 111B 7831090 | Lead wire (Flash (+)) Red | 1 | ○ | | |
| 6- 4 | 111B 7831070 | Lead wire (Battery (+)) Red | 1 | ○ | | |
| 6- 5 | 111B 7831200 | Lead wire (VCM) Yellow | 1 | ○ | | |
| 6- 6 | 111B 7830980 | Lead wire (Xe (-)) Red | 1 | ○ | | |
| 6- 7 | 111B 7831770 | Lead wire (MC (+)) Blue | 1 | ○ | | |
| 6- 8 | 111B 7831780 | Lead wire (MC (-)) Black | 1 | ○ | | |
| 6- 9 | 111B 7830970 | Lead wire (Xe (+)) Blue | 1 | ○ | | |
| 6- 10 | 111B 7830910 | Lead wire (Trigger 2) White | 1 | ○ | | |
| 6- 11 | 111B 7830960 | Lead wire (Trigger (-)) Brown | 1 | ○ | | |
| 6- 12 | 111B 7830950 | Lead wire (Trigger (+)) Green | 1 | ○ | | |
| 6- 13 | 111B 7831690 | Shielded wire Blue | 1 | ○ | | |
| 6- 14 | 111B 7831690 | Shielded wire Blue | 1 | ○ | | |
| 6- 15 | 111B 7831040 | Lead wire (SY (+)) White | 1 | ○ | | |
| 6- 16 | 111B 7831050 | Lead wire (SY (-)) Gray | 1 | ○ | | |
| 6- 17 | 111B 7831130 | Lead wire (SBNO) Yellow | 1 | ○ | | |
| 6- 18 | 111B 7831150 | Lead wire (SBNC) Orange | 1 | ○ | | |
| 6- 19 | 111B 7831140 | Lead wire (SBC) Violet | 1 | ○ | | |
| 6- 20 | 111B 7831120 | Lead wire (AF (-)) Black | 1 | ○ | | |
| 6- 21 | 111B 7831110 | Lead wire (AF (+)) Red | 1 | ○ | | |
| 6- 22 | | Lead wire Red | 1 | | Included in 1-73 | |
| 6- 23 | | Lead wire Black | 1 | | Included in 1-73 | |
| 6- 24 | 111B 7831210 | Lead wire (EA) Yellow | 1 | ○ | | |
| 6- 25 | 111B 7831230 | Lead wire (EC) Orange | 1 | ○ | | |
| 6- 26 | 111B 7831220 | Lead wire (EB) Blue | 1 | ○ | | |
| 6- 27 | 111B 7831270 | Lead wire (SZ (-)) White | 1 | ○ | | |
| 6- 28 | 111B 7831260 | Lead wire (SZ (+)) Brown | 1 | ○ | | |
| 6- 29 | 111B 7831010 | Lead wire (PRA) Violet | 1 | ○ | | |
| 6- 30 | 111B 7831020 | Lead wire (PRE) Green | 1 | ○ | | |
| 6- 31 | 111B 7831030 | Lead wire (PRK) Gray | 1 | ○ | | |
| 6- 32 | 111B 7831290 | Lead wire (PLL) Green | 1 | ○ | | |

Q922

| Ref No. | Part No. | Part Name | Q'ty | Can be supplied or not | Remarks | |
|---------|--------------|---------------------------|------|------------------------|---------|--|
| 6- 33 | 111B 7831280 | Lead wire (PLC) White | 1 | ○ | | |
| 6- 34 | 111B 7831300 | Lead wire (PLR) Yellow | 1 | ○ | | |
| 6- 35 | 111B 7811170 | Lead wire (FM (-)) Blue | 1 | ○ | | |
| 6- 36 | 111B 7811160 | Lead wire (FM (+)) Orange | 1 | ○ | | |
| 6- 37 | 111B 7831250 | Lead wire (SH (-)) Black | 1 | ○ | | |
| 6- 38 | 111B 7831240 | Lead wire (SH (+)) Red | 1 | ○ | | |
| 6- 39 | 111B 7830990 | Lead wire Yellow | 1 | ○ | | |
| 6- 40 | 111B 7831000 | Lead wire Blue | 1 | ○ | | |
| 6- 41 | 111B 7831180 | Lead wire (LM (+)) Orange | 1 | ○ | | |
| 6- 42 | 111B 7831190 | Lead wire (LM (-)) Blue | 1 | ○ | | |
| 6- 43 | 111B 7831590 | Lead wire (PIK) Gray | 1 | ○ | | |
| 6- 44 | 111B 7831600 | Lead wire (PIA) Brown | 1 | ○ | | |
| 6- 45 | 111B 7831580 | Lead wire (PIE) Green | 1 | ○ | | |
| 6- 46 | 111B 7822640 | Lead wire (SG) Black | 1 | ○ | | |
| 6- 49 | 110A 7829920 | Data FPCB assembly | 1 | ○ | | |
| 6- 50 | 104K 894360 | Lithium battery (CR123A) | 2 | - | | |

MEMO
